



MST
max speed technology

RC



**4X4
OFF ROAD**



INSTRUCTION MANUAL



WHEELBASE : 313mm

WIDTH : 230mm

GEAR RATIO = 1:36.3~1:53.4


TIRE WIDTH / DIAMETER : 40×120mm

Shaft-Driven Full-Time 4WD

Front and Rear MPA-axle

WWW.RC-MST.COM

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

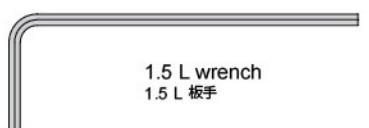


1.5 L wrench
1.5 L 板手

1.5
Hex




5.5×4.0 Wrench
5.5×4.0 板手

2.0
Hex

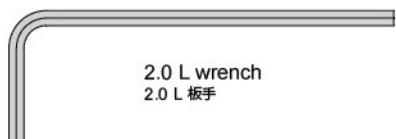

2.0 L wrench
2.0 L 板手

O-ring P3 ×4
O環

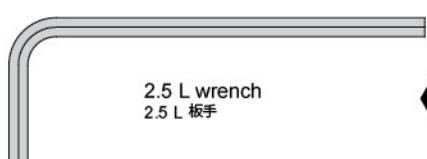

2.5 L wrench
2.5 L 板手

2.5
Hex

R-clip ×9
R形扣



5.5 & 7.0 alum. wrench
5.5 & 7.0 套筒扳手

5.5

7.0

EVA double sided tape
EVA 雙面膠

 
20×80 Sponge tape
泡棉膠

158×12 Sponge tape
泡棉膠


NECESSARY TOOLS FOR ASSEMBLY 工具需求
(NOT INCLUDED IN KIT) [另購]




Hobby knife
美工刀




Screwdriver
螺絲起子

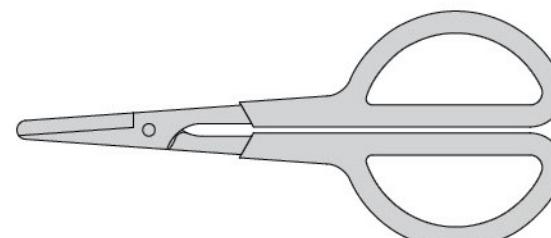

Scissors
剪刀

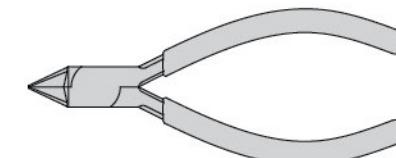


Side cutter
斜口鉗

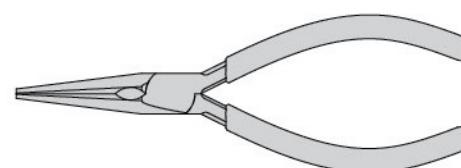

Needle nose pliers
尖嘴鉗

Please follow the assembling figures and instructions closely
for your [CFX-W] best performance!
請依照說明書圖示步驟安裝以發揮 [CFX-W] 最好效能！

PARTS

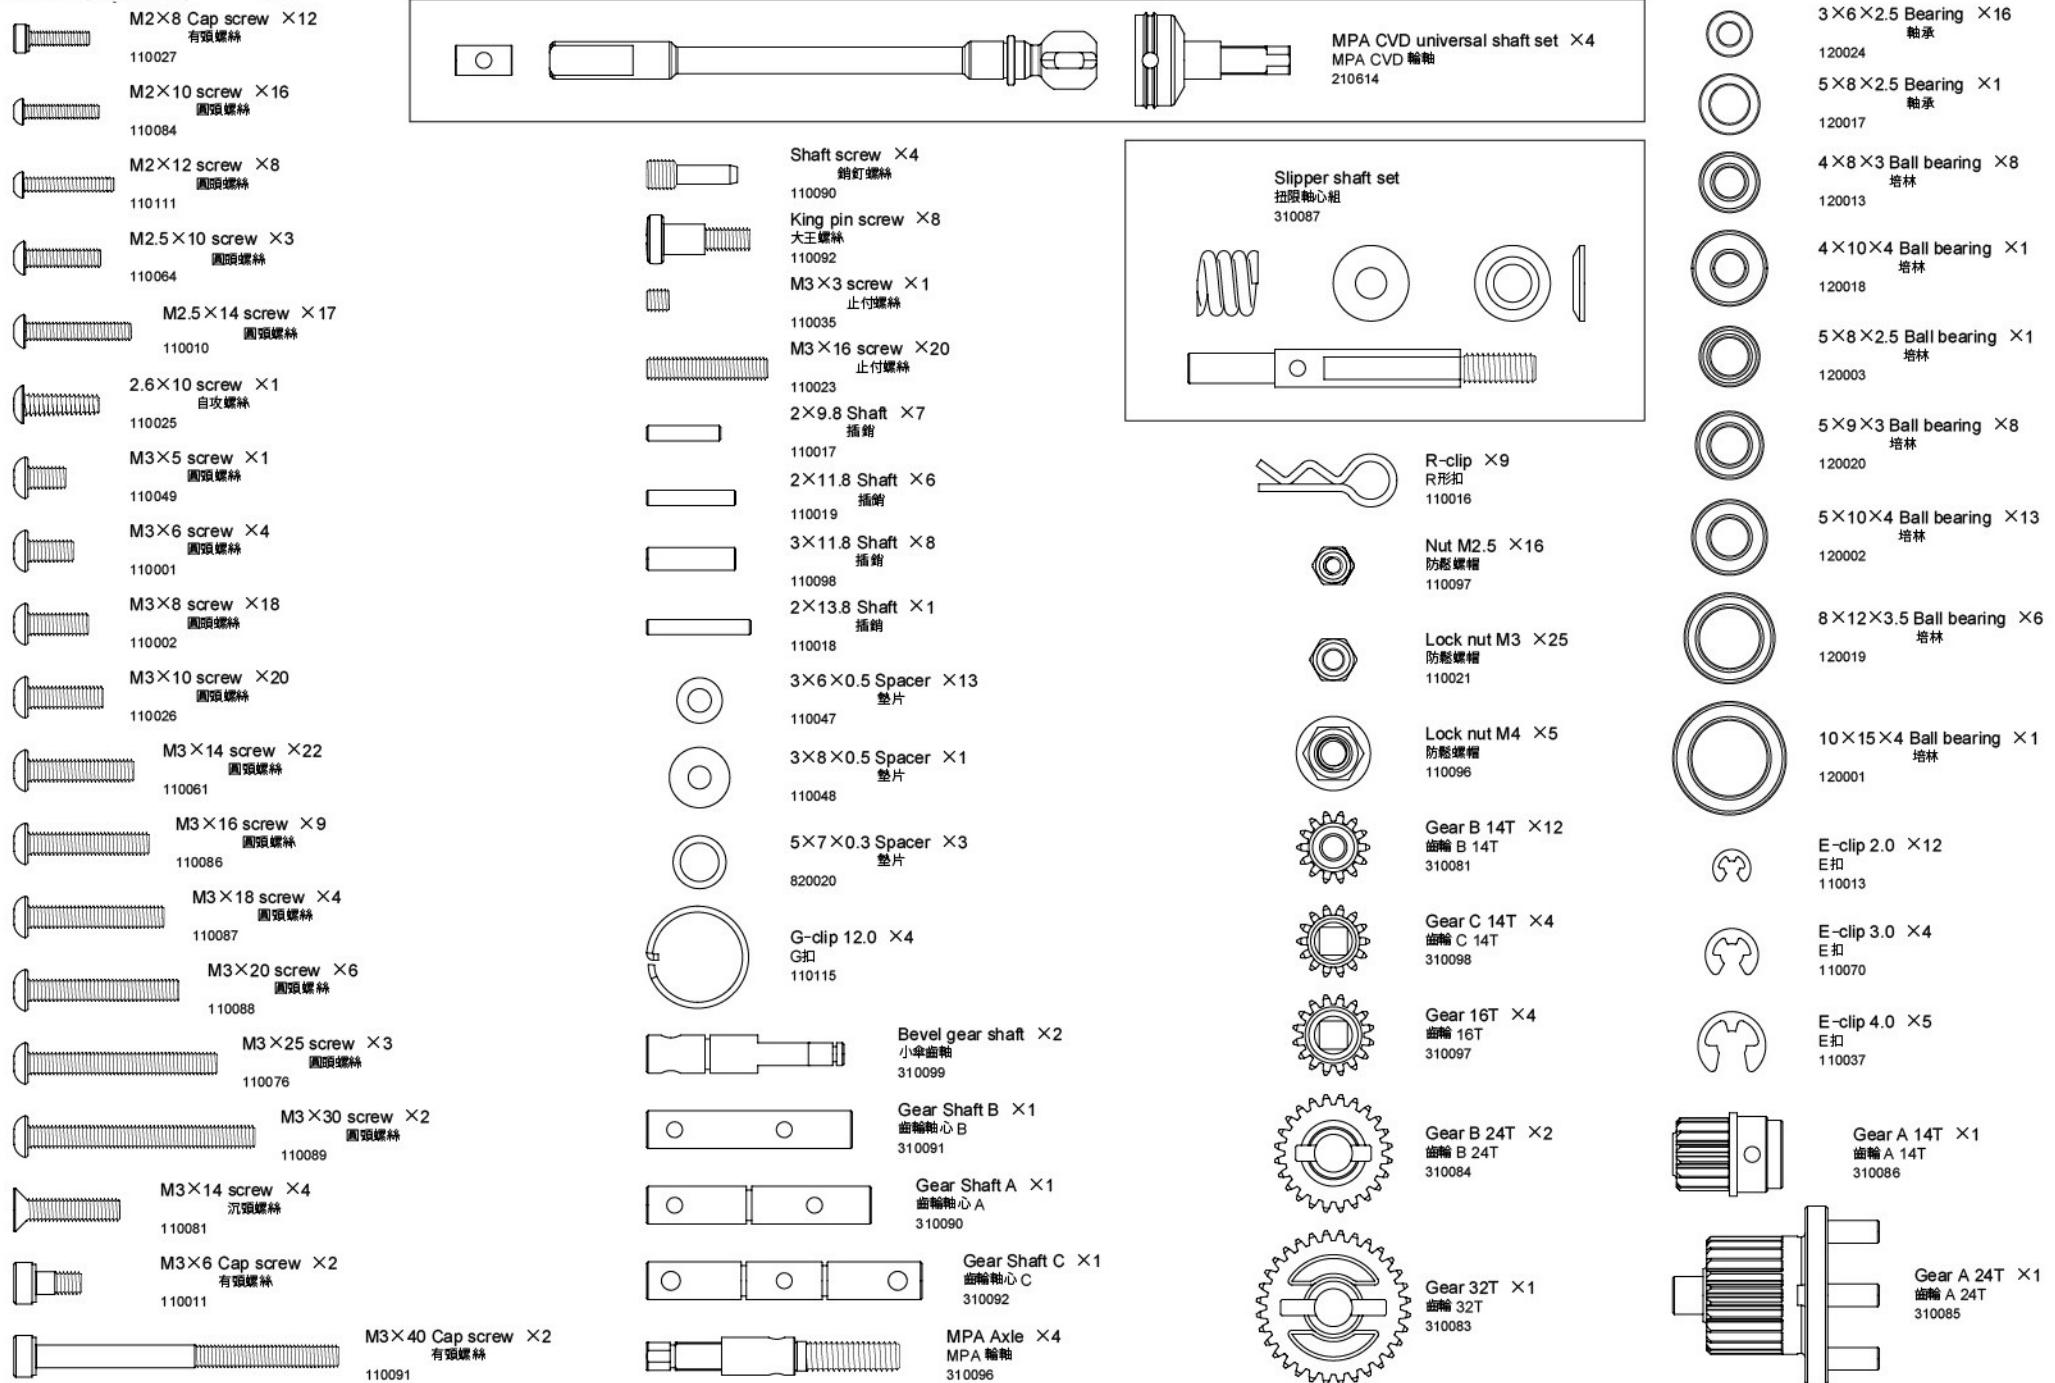

PARTS

Damper O-ring P3 ×8
避震器O環
130028

 


6×1 O-ring ×4
O環
130053


8.5×1 O-ring ×4
O環
130052

Piston rod ×4
避震軸心
310115


TC80 Alum. damper set (silver) (4)
TC80 鋁合金避震器組 (銀) (4)
820130S




Damper plastic maintenance set (2)
避震膠件組 (2)
820116-1

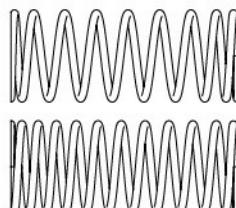

 
30mm TC coil spring set (6)
30mm TC 避震彈簧組 (6)
820131




5.8 Rod ends set ×4
5.8 拉桿頭組
230057

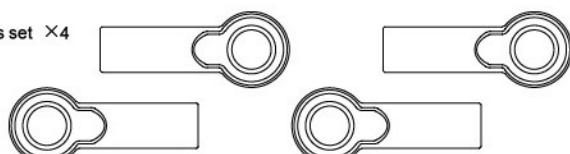

CFX-W Bumper set
CFX-W 保桿組
230124


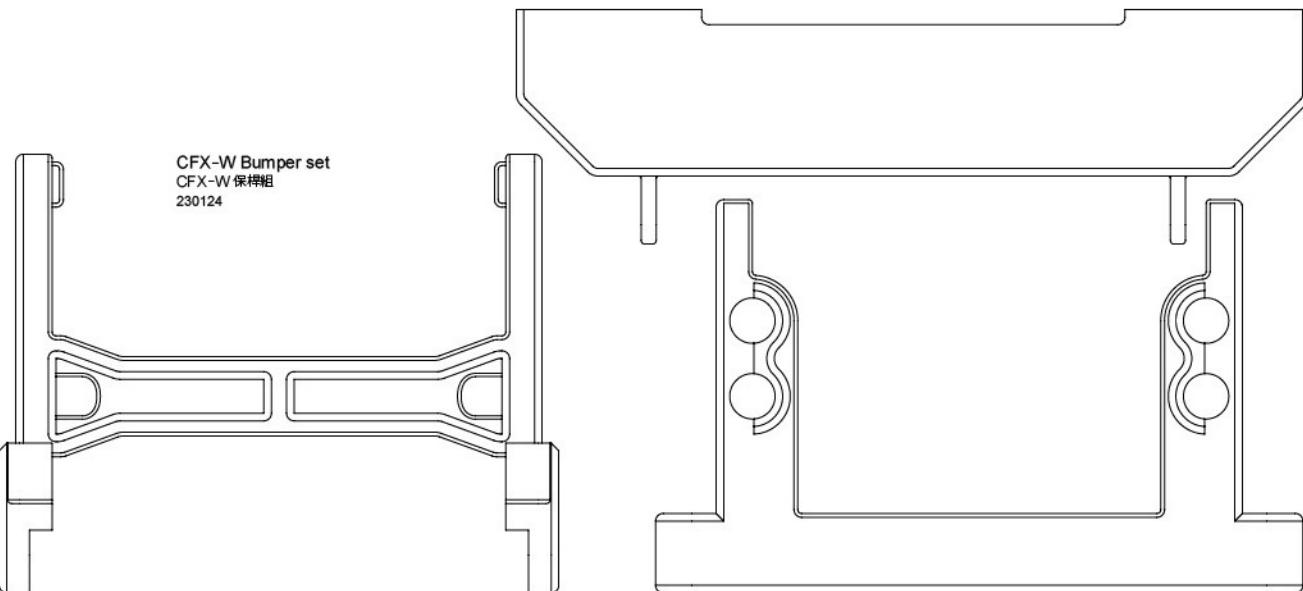


CFX-W Battery tray set
CFX-W 電池盒組
230122







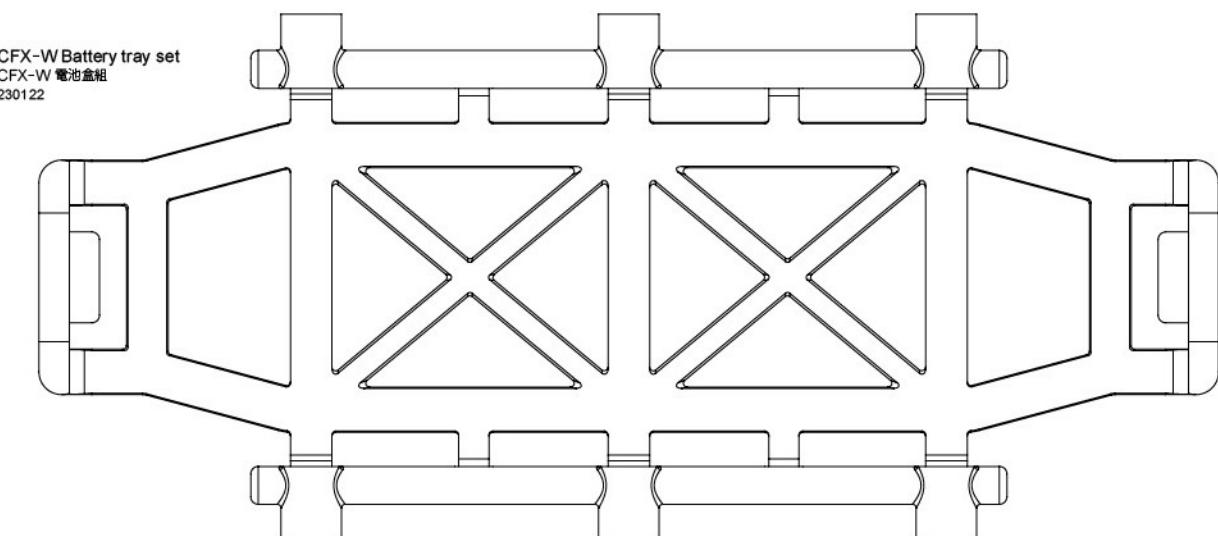


CMX Ball connector set ×5
CMX 球頭組
230016

  Servo horn set (long) (23T/25T)
伺服機舵片組-長 (23T/25T)
210033





PARTS

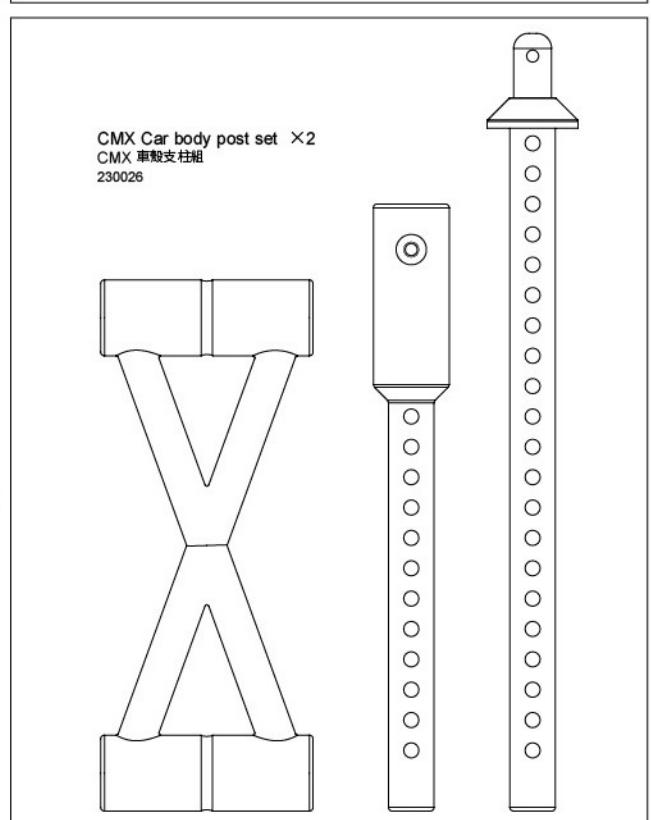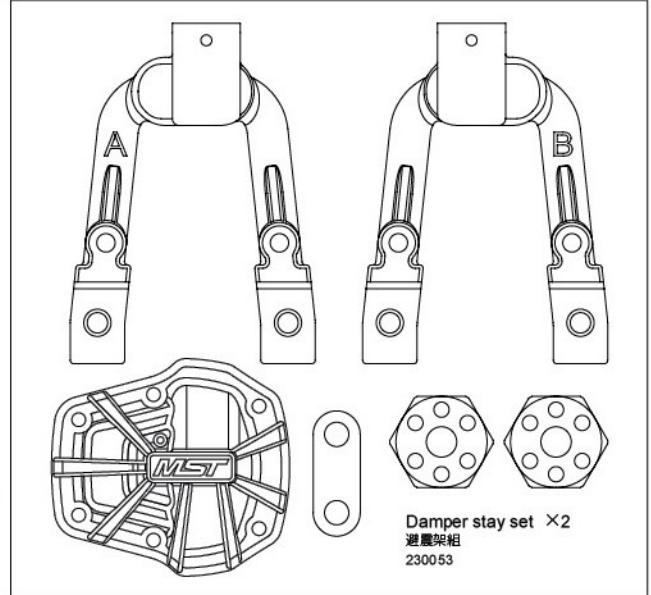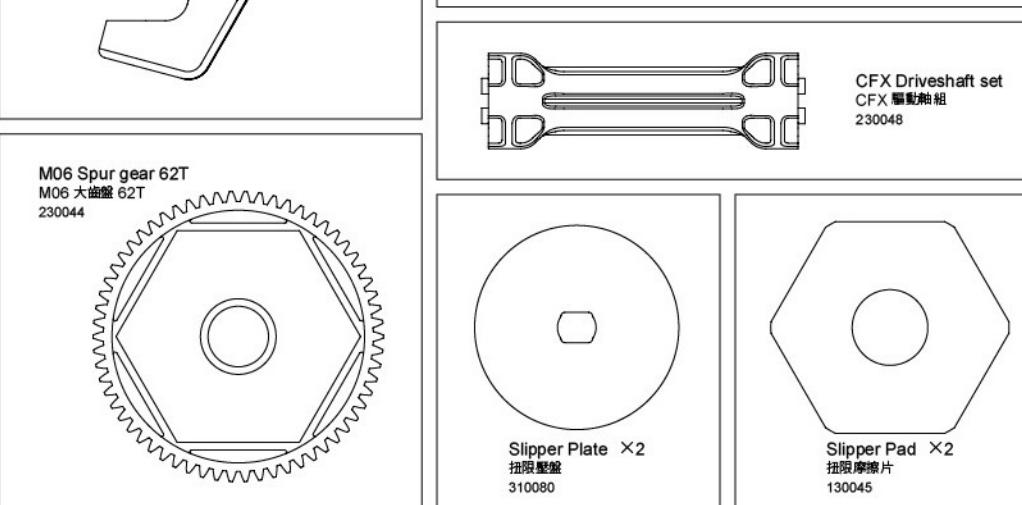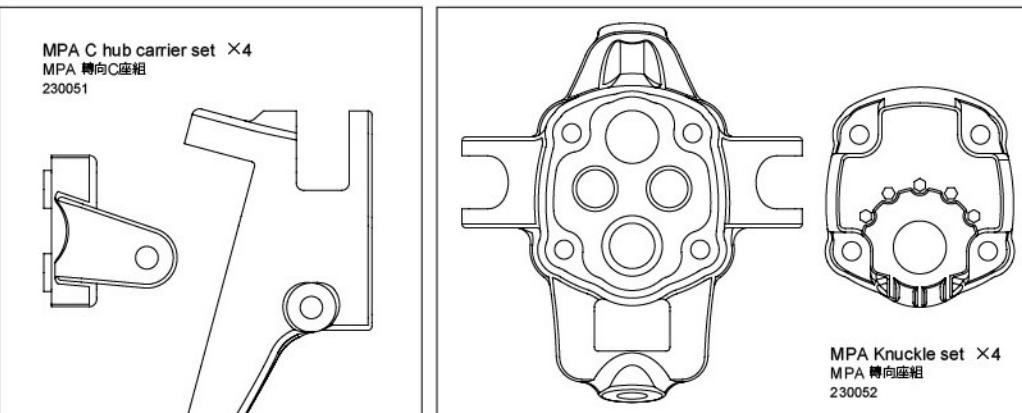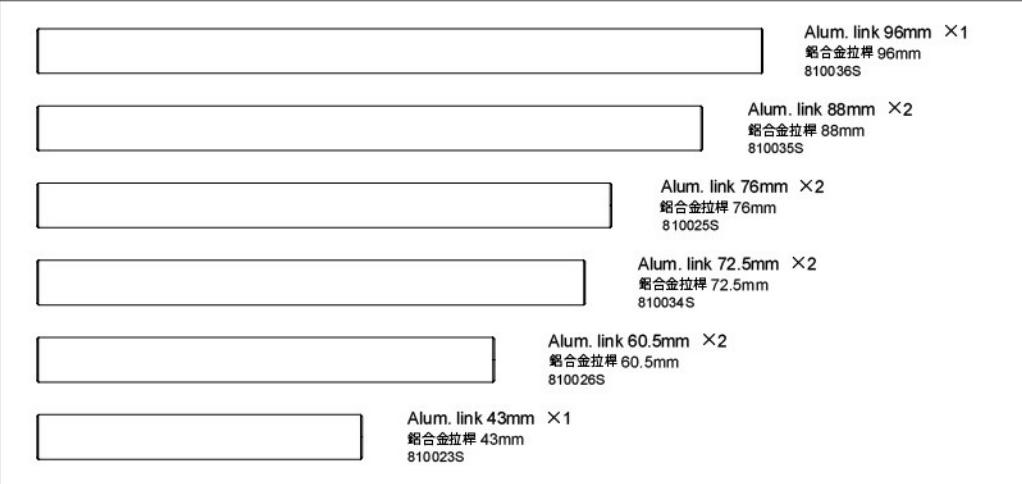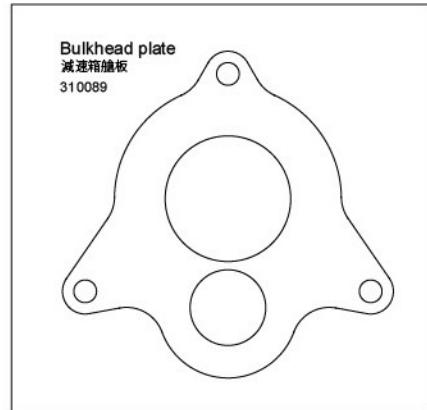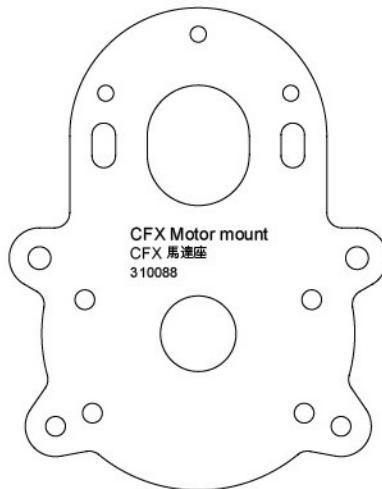


PARTS


MPA Axle cover ×2
MPA 車軸蓋
230050

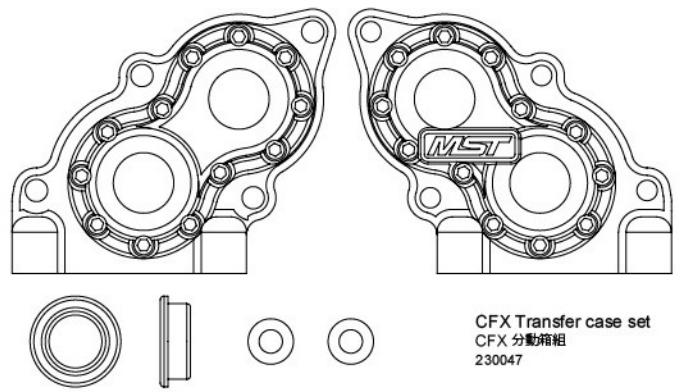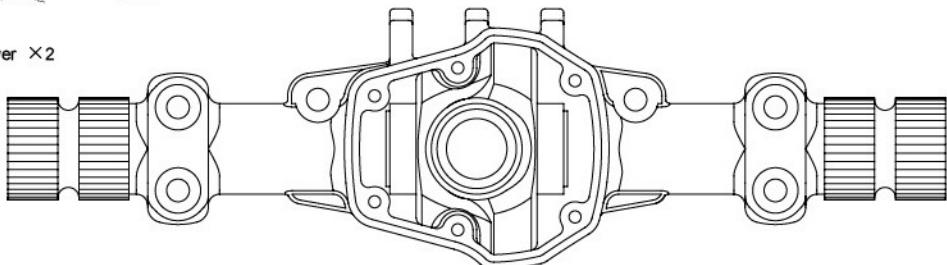


CFX Transfer case set
CFX 分動箱組
230047

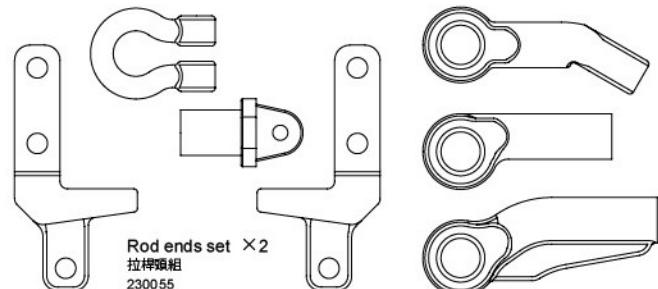


Rod ends set ×2
拉桿頭組
230055

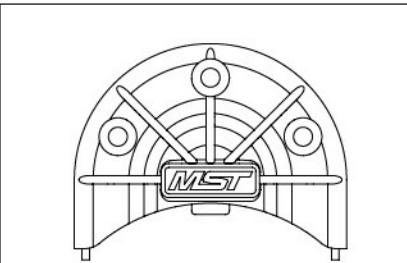


CFX Deceleration gear box set
CFX 減速箱組
230045

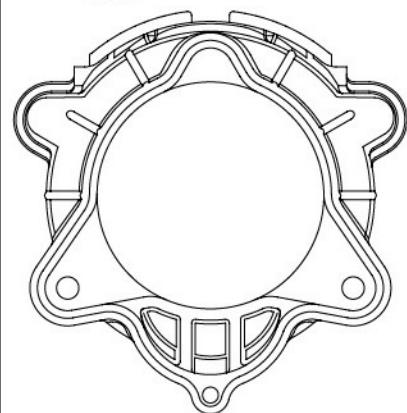

648 1.9" Crawler wheel ×4
648 1.9" 攀岩框
230043

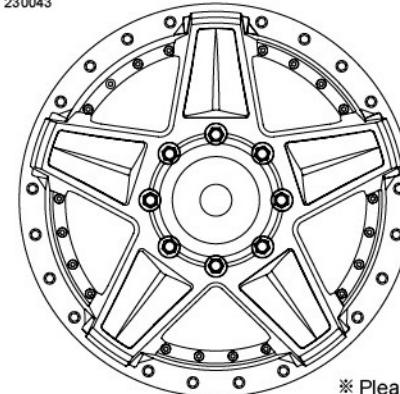

236 1.9" Crawler wheel ×4
236 1.9" 攀岩框
832071BK

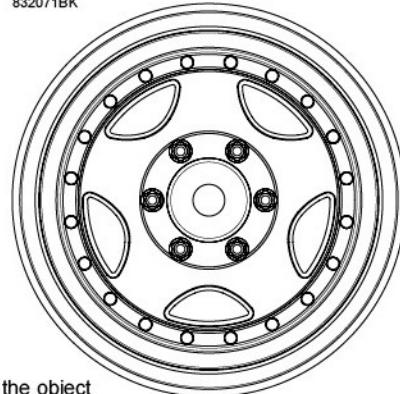


※ Please make the object
as the standard.
請以實物為主。

Velcro strap 16×210mm
電池束帶
130046

MST








CFX Gear box support
CFX 減速箱支架組
230046

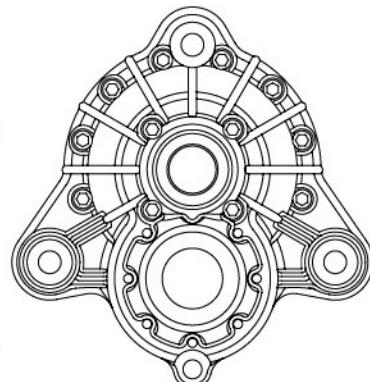

CFX-W Chassis rail ×2
CFX-W 大樑
310093
























PARTS

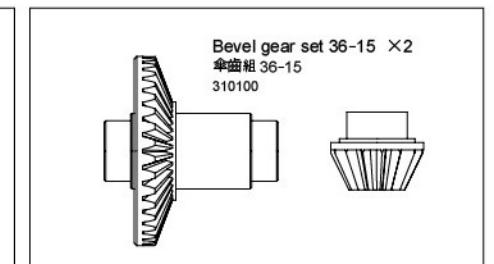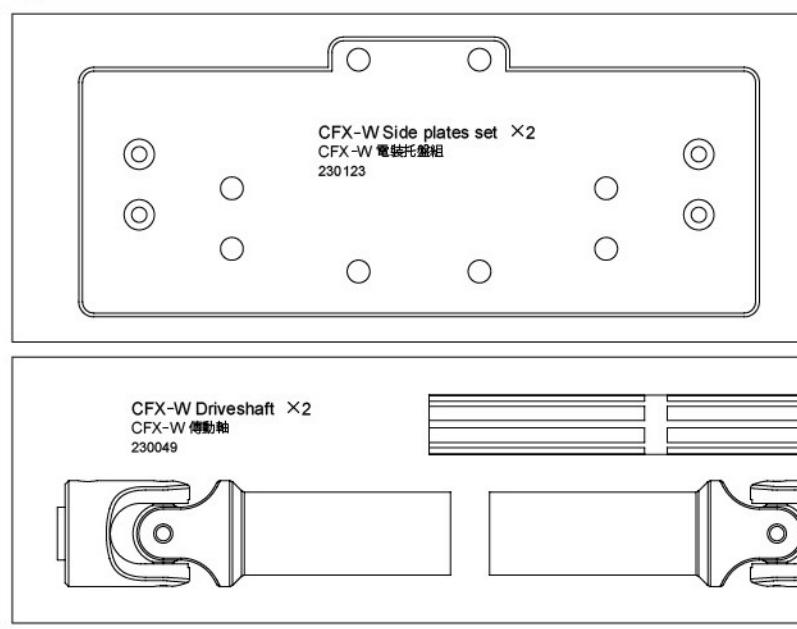
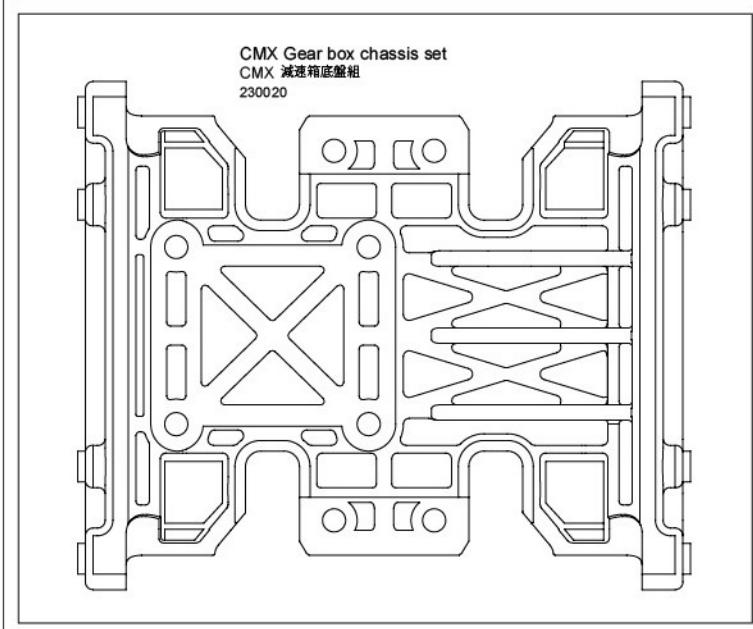
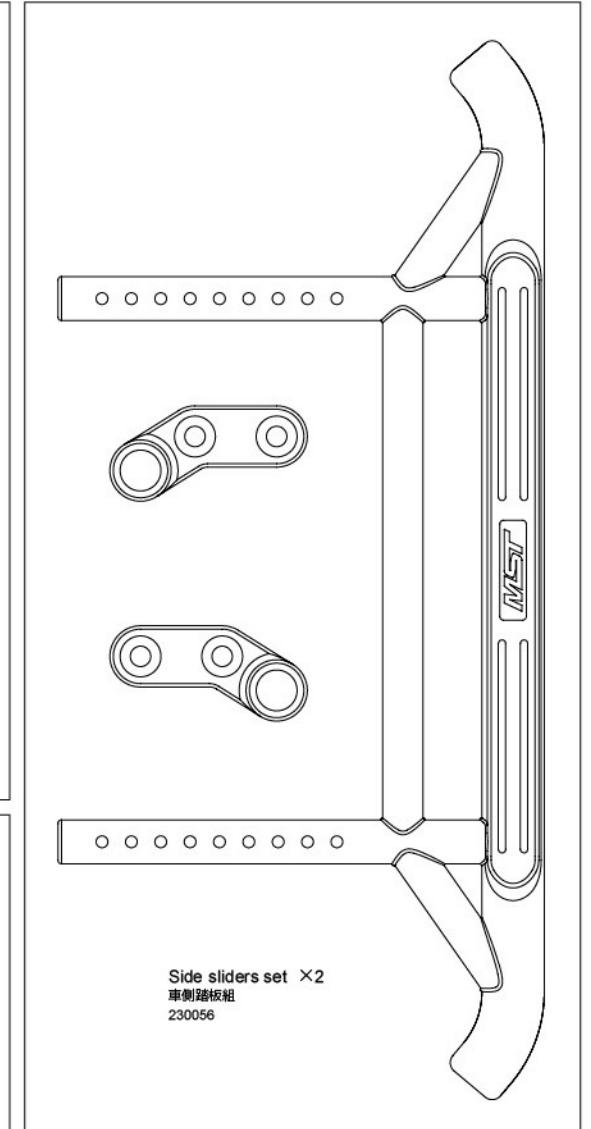
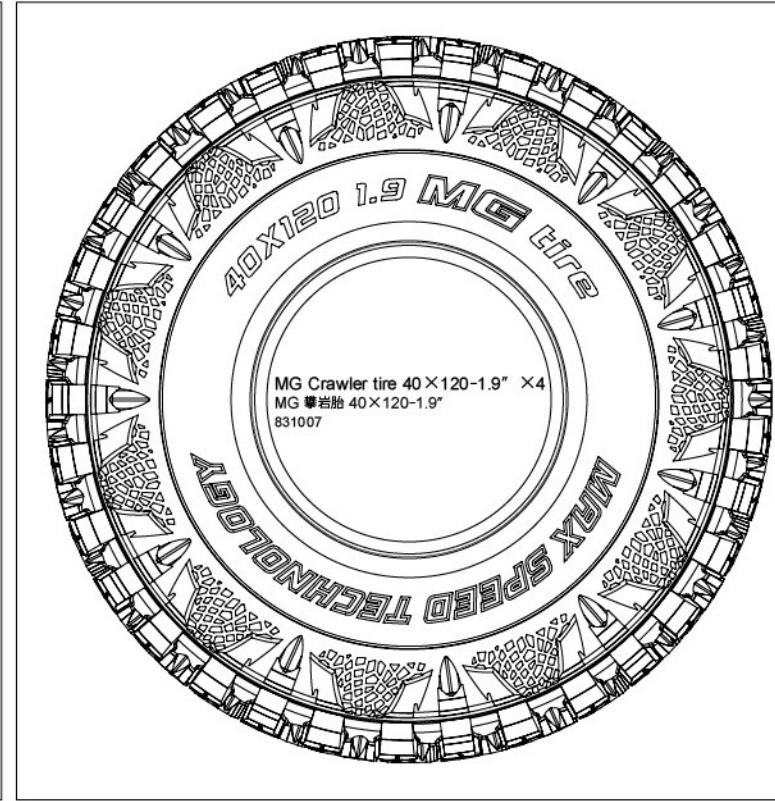


◀ TRANSMISSION

        
减速箱

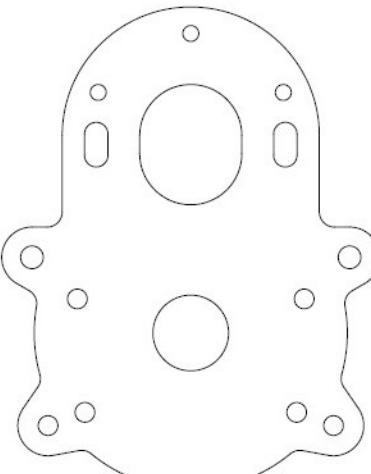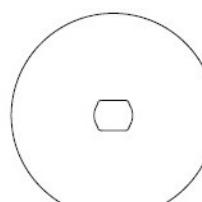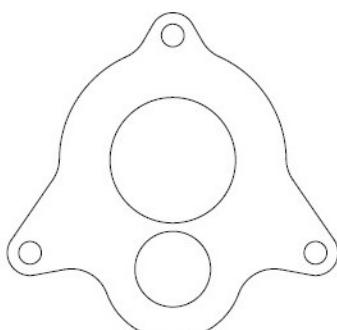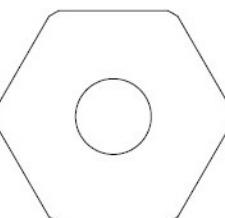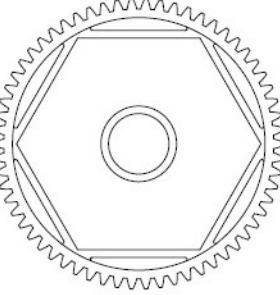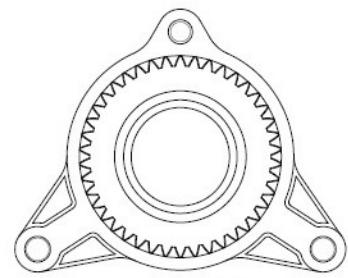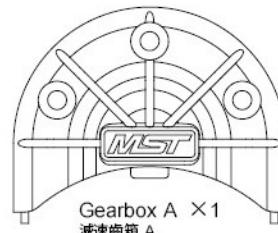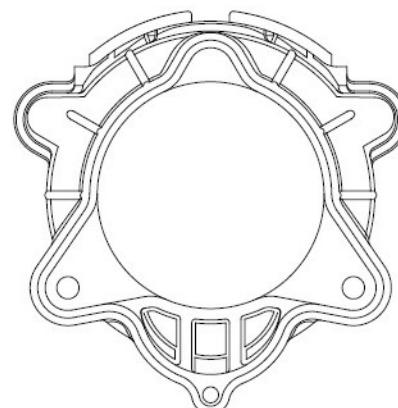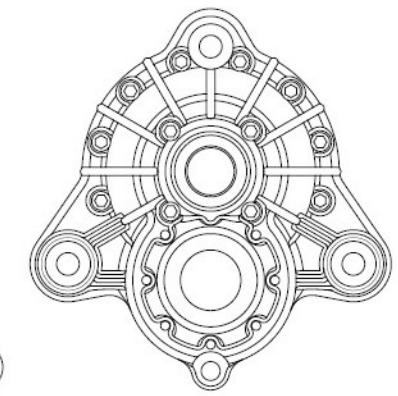M2.5×10 screw ×3
圓頭螺絲M2.5×14 screw ×1
圓頭螺絲M3×10 screw ×6
圓頭螺絲M3×16 screw ×1
圓頭螺絲M3×6 cap screw ×2
有頭螺絲M3×40 cap screw ×2
有頭螺絲5×8×2.5 Bearing ×1
軸承5×8×2.5 Ball bearing ×1
培林4×10×4 Ball bearing ×1
培林5×10×4 Ball bearing ×3
培林10×15×4 Ball bearing ×1
培林2×9.8 Shaft ×2
插銷Gear shaft A ×1
齒輪軸心 AMain shaft ×1
主齒軸3×6×0.5 Spacer ×2
墊片5×7×0.3 Spacer ×1
墊片4×10×1 Spacer ×1
墊片Slipper spacer ×1
扭限墊片E-clip 4.0 ×1
E扣Bearing holder ×1
軸承套Lock nut M4 ×1
防鬆螺帽Spring ×1
扭限彈簧Gear B 14T ×4
齒輪 B 14TGear B 24T ×1
齒輪 B 24TGear A 14T ×1
齒輪 A 14TGear A 24T ×1
齒輪 A 24TMotor mount ×1
馬達座Slipper plate ×2
扭限壓盤Bulkhead plate ×1
減速箱隔板Slipper pad ×2
扭限摩擦片M06 Spur gear 62T ×1
M06 大齒盤 62TGear 42T ×1
齒輪 42TGearbox mount ×1
減速齒箱固定座Gearbox A ×1
減速齒箱 AGearbox B ×1
減速齒箱 BGearbox C ×1
減速齒箱 C

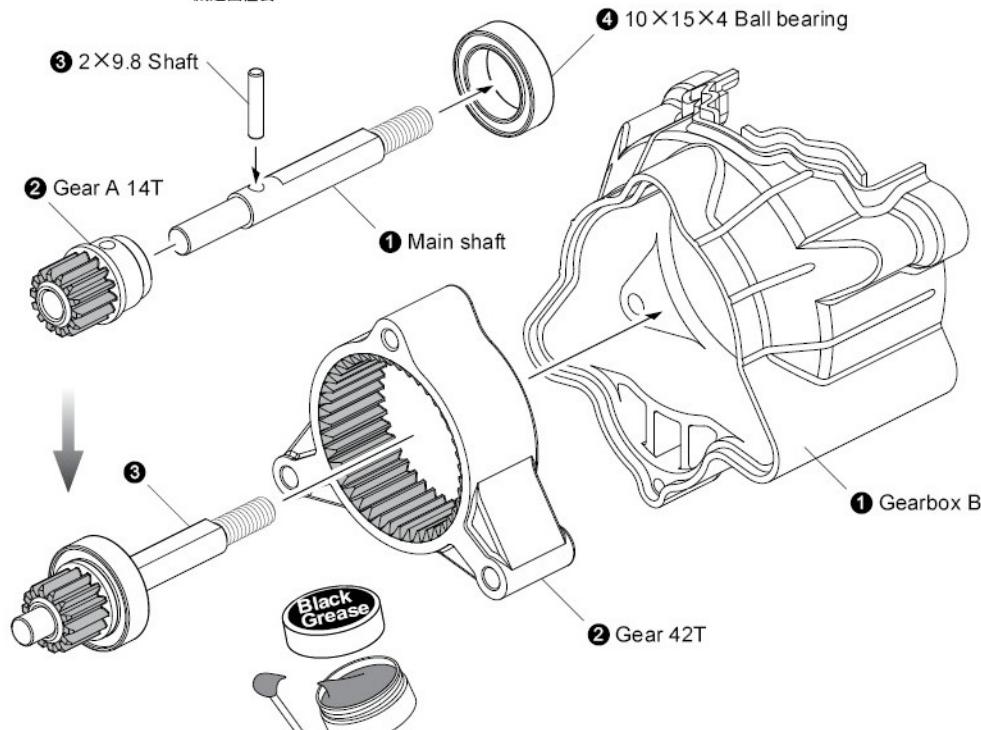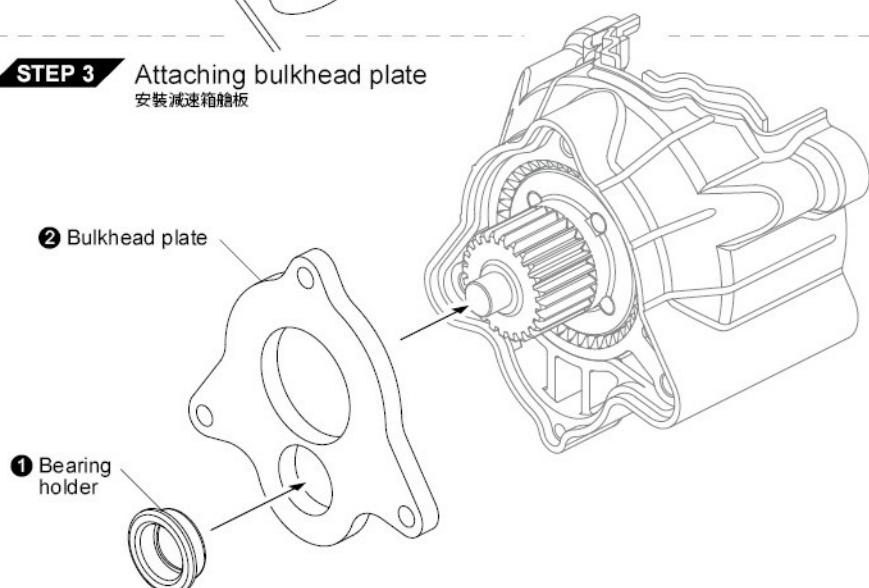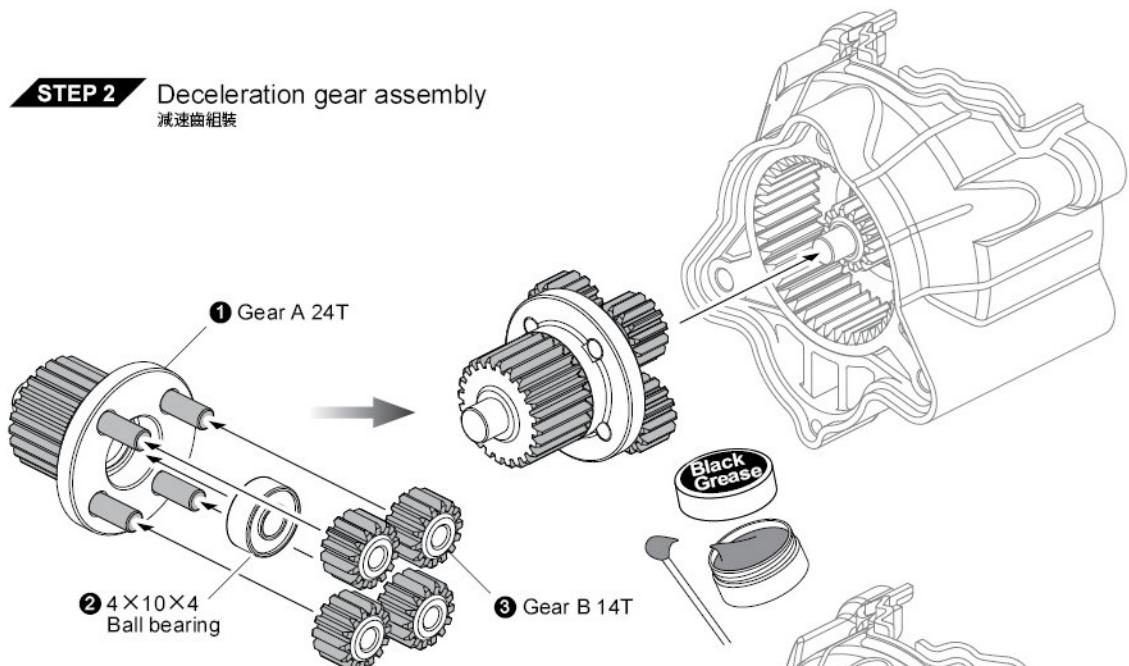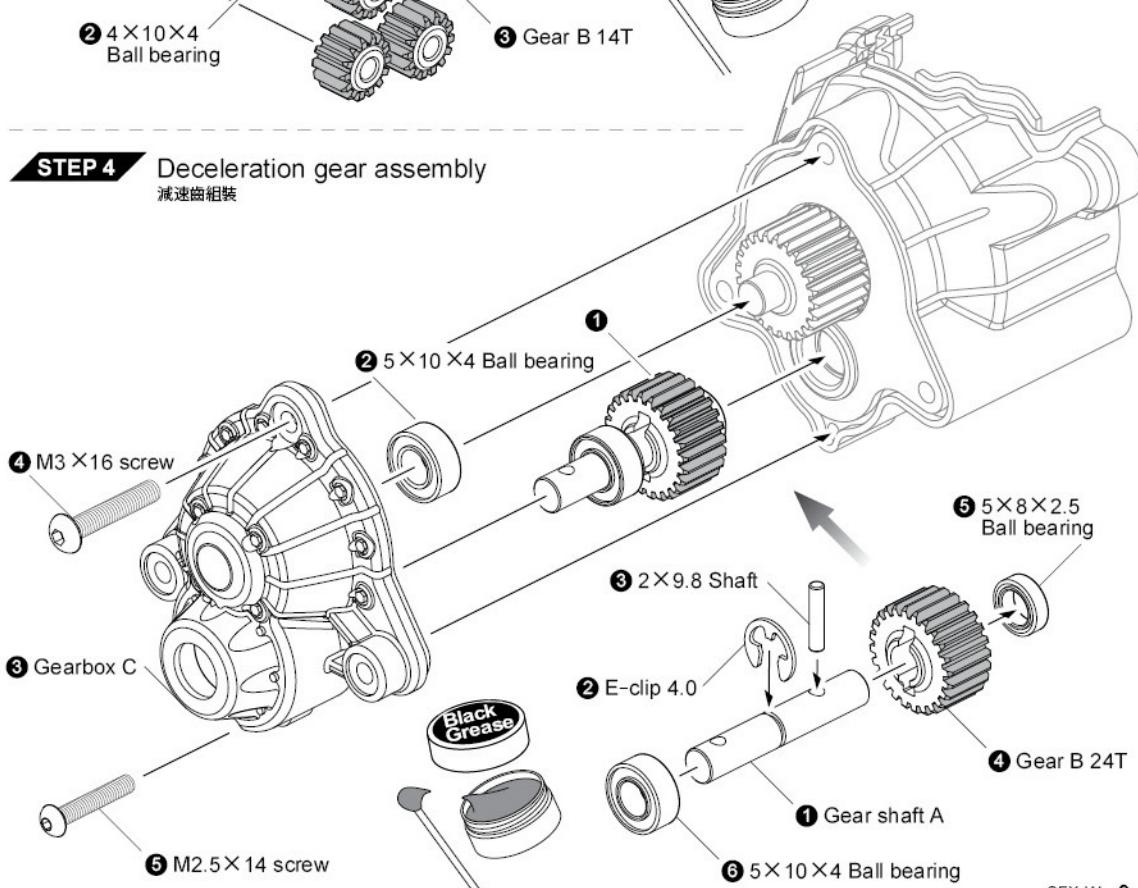STEP 1 Deceleration gear assembly
減速齒組裝STEP 3 Attaching bulkhead plate
安裝減速箱船板STEP 2 Deceleration gear assembly
減速齒組裝STEP 4 Deceleration gear assembly
減速齒組裝

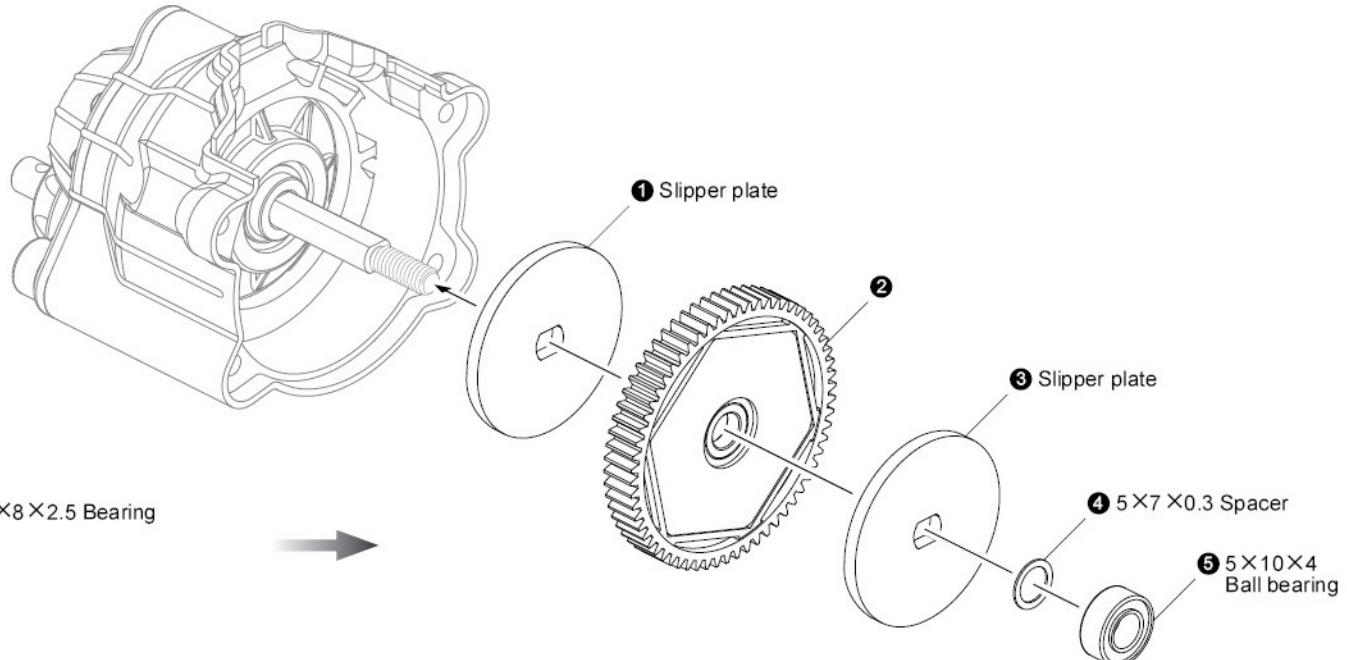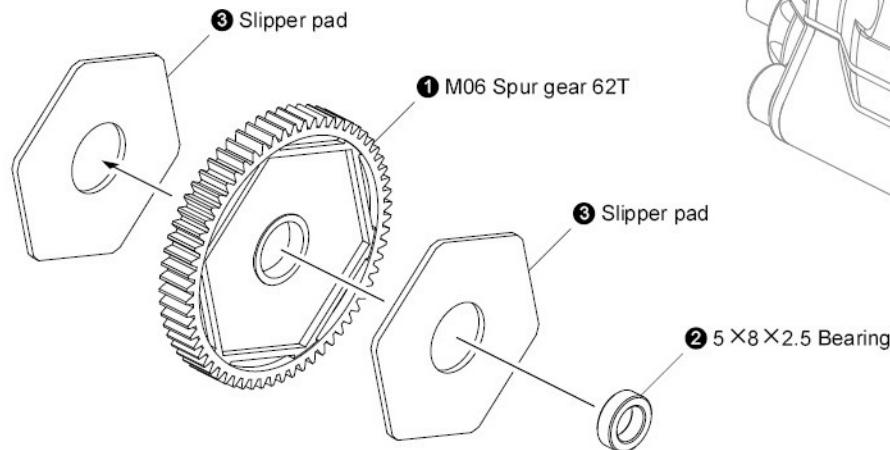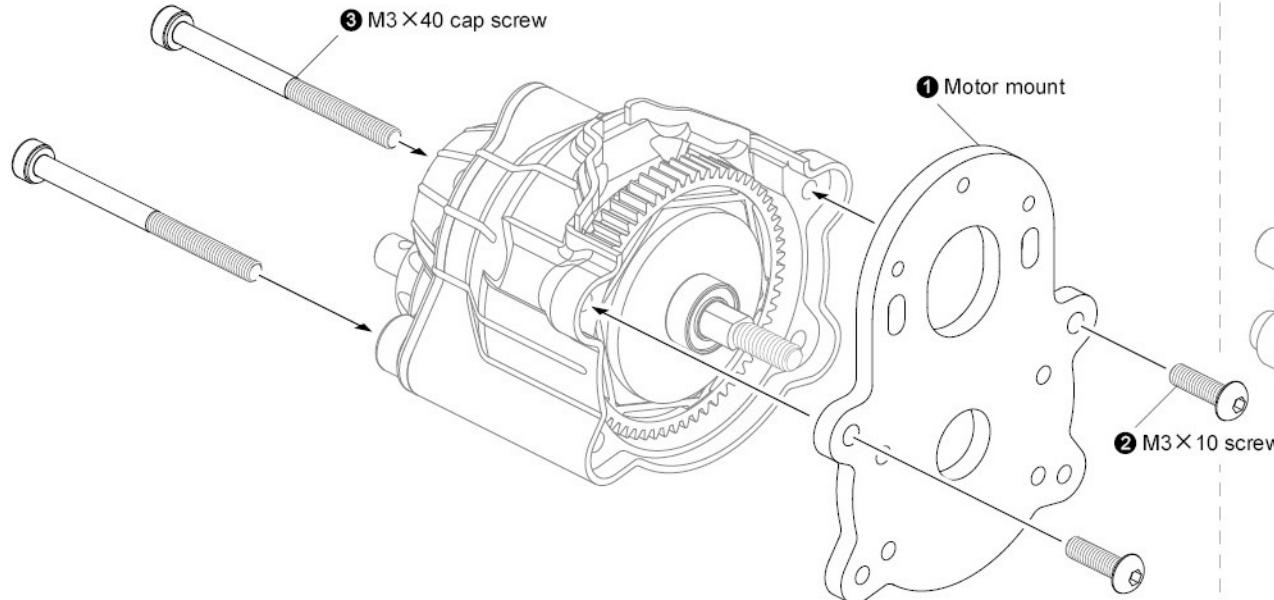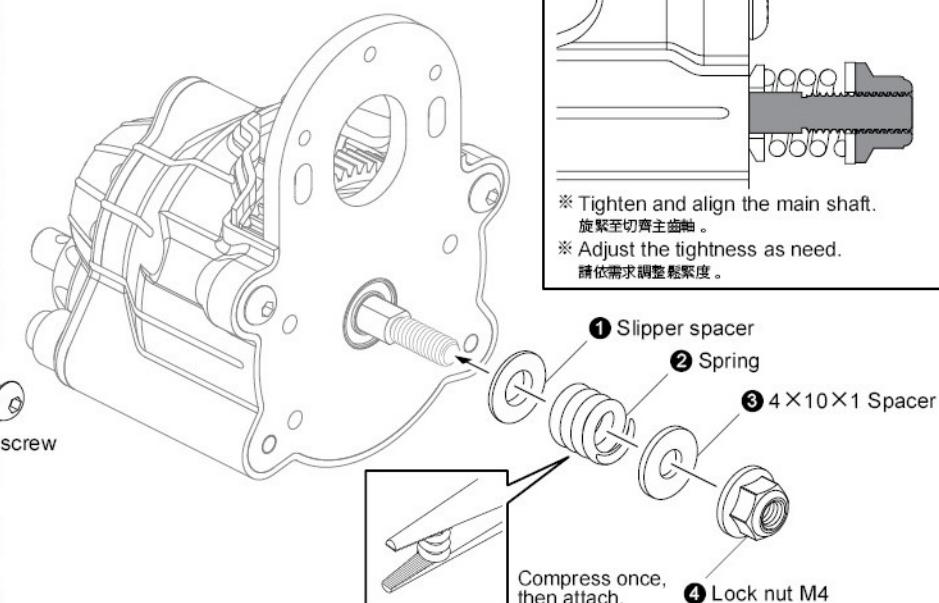
STEP 5 Attaching spur gear
安裝大齒盤STEP 6 Attaching motor mount
安裝馬達座STEP 7 Attaching spring
安裝扭限彈簧

! Please note the overtightening slipper clutch may cause the drivetrain broken.
請注意如過度旋緊，將會使傳動件毀壞。

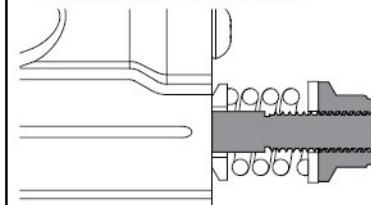


* Tighten and align the main shaft.
旋緊至切齊主軸頭。

* Adjust the tightness as need.
請依需求調整鬆緊度。




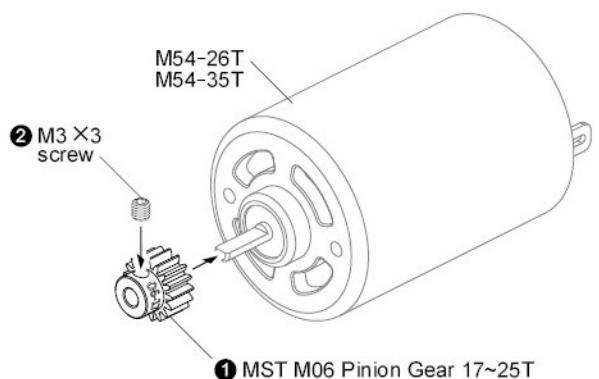
STEP 8 Attaching pinion gear
安裝馬達齒

GEAR RATIO

Pinion Gear	Spur Gear 62T
17	53.35
18	50.39
19	47.74
20	45.35
21	43.19
22	41.23
23	39.43
24	37.79
25	36.28


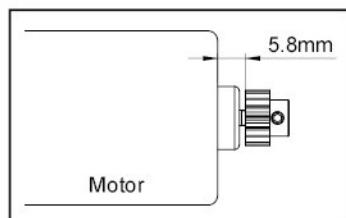


- ※ Please set the gear ratio according to motor specifications, environments, and personal requirements.
齒比的選擇會因馬達規格、場地形態、車手手感，而有不同選擇。
可先參考當地配備後再選擇齒比！
- ※ Please refer to MST office website for completed pinion specifications.
如須另購馬達齒，請上官網查詢！[www.rc-mst.com]

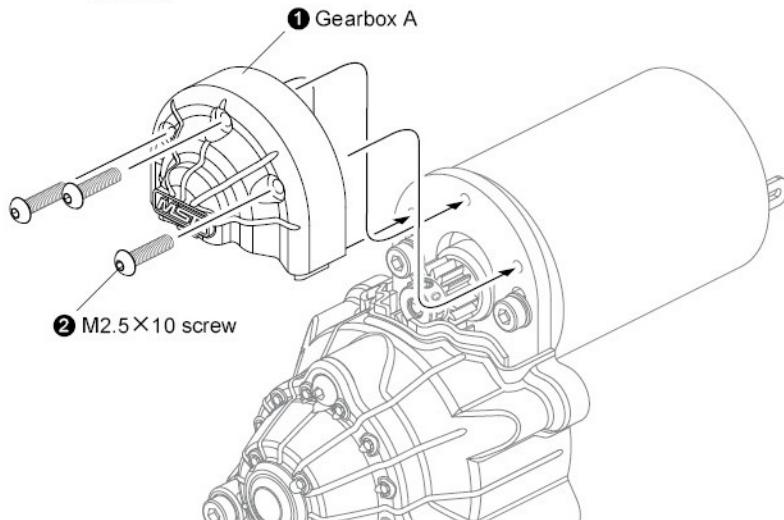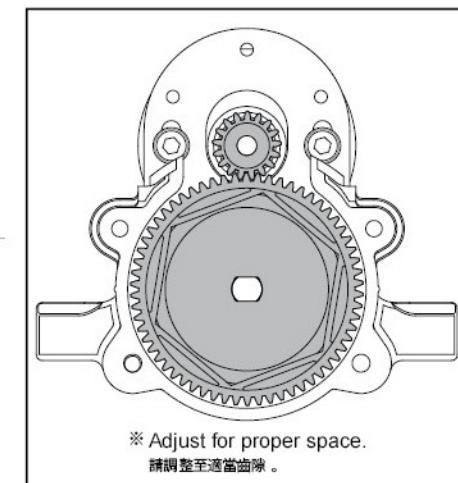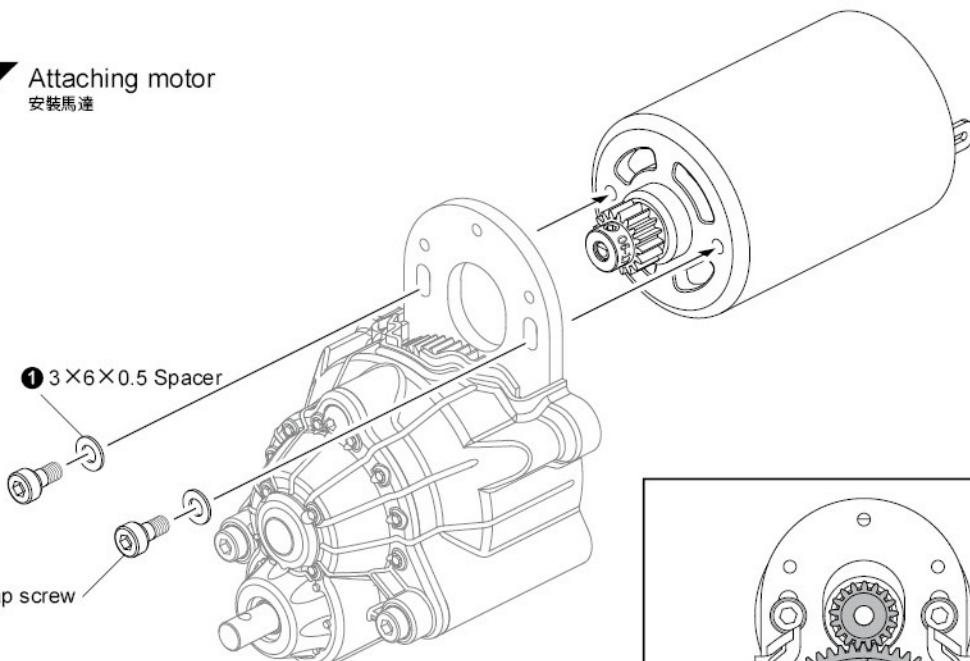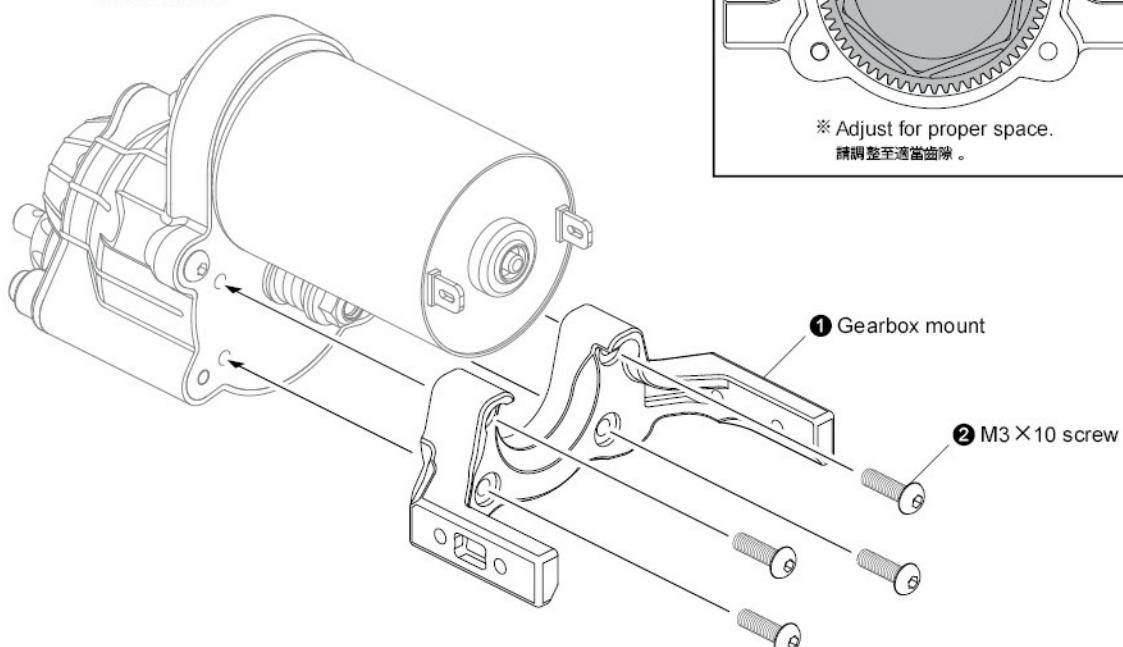STEP 10 Attaching dust cover
安裝防塵蓋STEP 9 Attaching motor
安裝馬達STEP 11 Attaching gearbox mount
安裝減速箱固定座



◀ TRANSFER CASE

分動箱

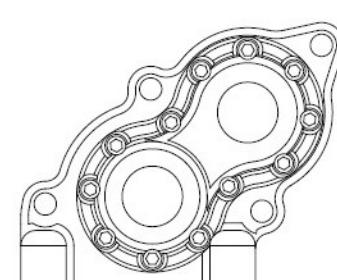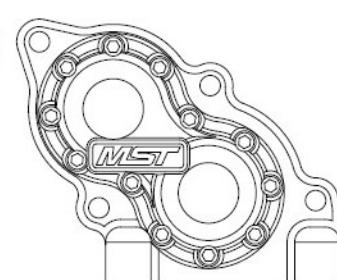M3×5 screw ×1
圓頭螺絲3×6×0.5 Spacer ×1
墊片M3×14 screw ×4
圓頭螺絲5×10×4 Ball bearing ×4
培林2×9.8 Shaft ×1
插銷Gear shaft B ×1
齒輪軸心 B2×13.8 Shaft ×1
插銷Gear shaft C ×1
齒輪軸心 CE-clip 4.0 ×2
E扣Gear B 24T ×1
齒輪 B 24TGear 32T ×1
齒輪 32TGear box A ×1
分動箱 AGear box B ×1
分動箱 B


STEP 1 Deceleration gear assembly

減速齒組裝

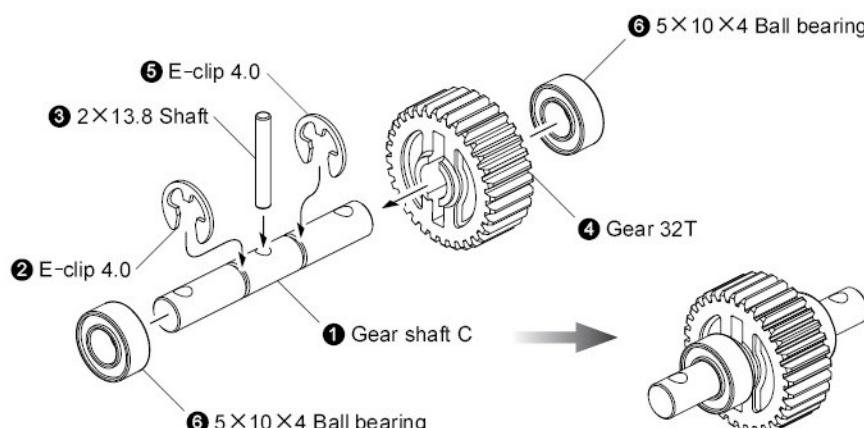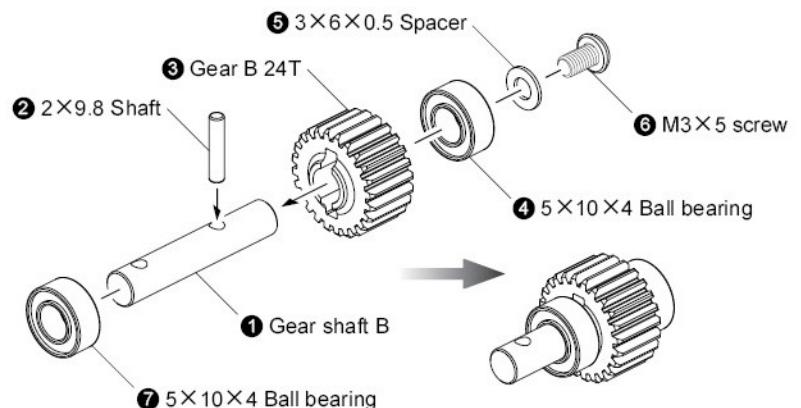

STEP 2 Attaching gear

安裝減速齒

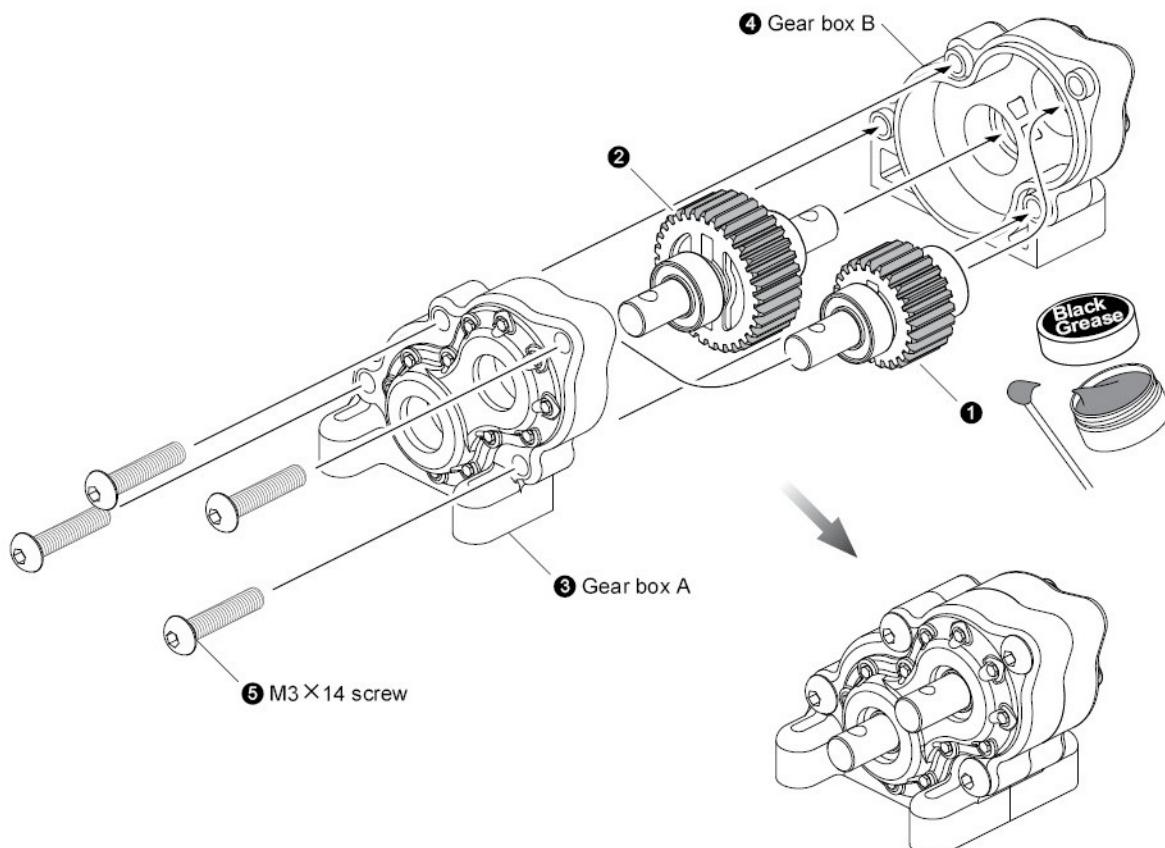

 M3×6 screw ×4
圓頭螺絲

 M3×8 screw ×14
圓頭螺絲

 M3×10 screw ×9
圓頭螺絲


 M3×14 screw ×4
沉頭螺絲

 2×11.8 Shaft ×2
插銷


 Lock nut M3 ×4
防鬆螺帽



Driveshaft
傳動軸

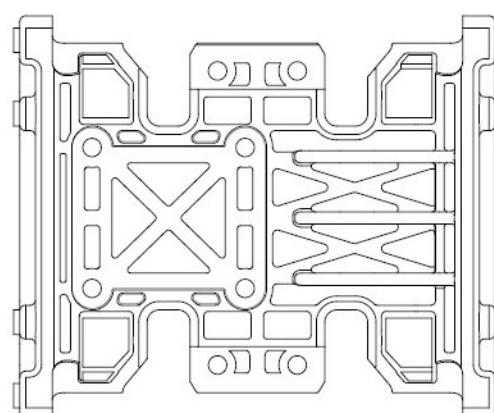


Gearbox chassis ×1
減速箱底盤

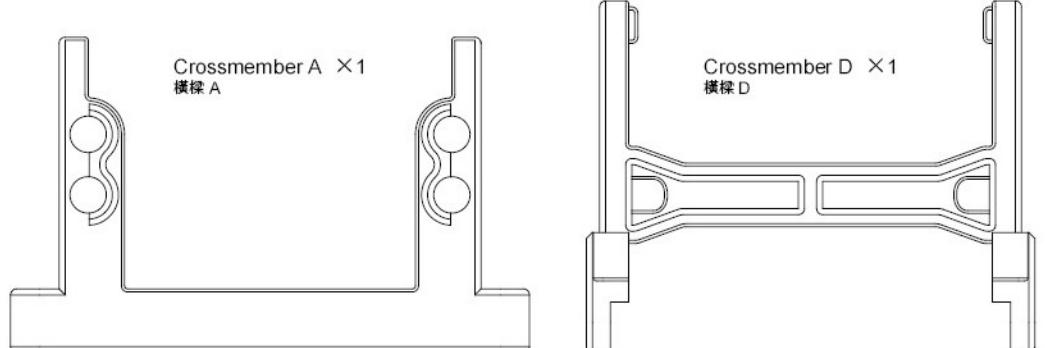

Crossmember A ×1
橫桿A


Crossmember D ×1
橫桿D

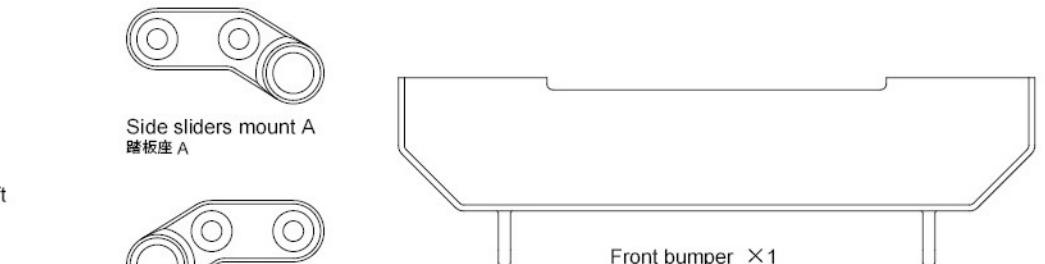

Side sliders mount A
踏板座A

Front bumper ×1
前保桿

Side sliders mount B
踏板座B

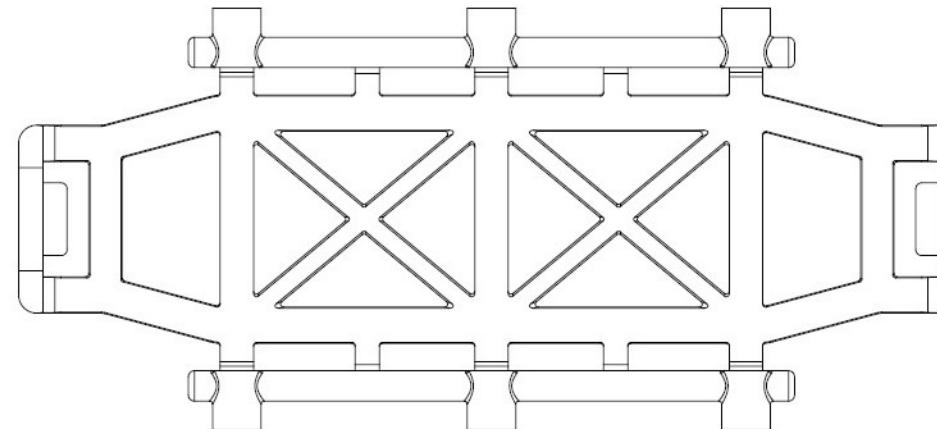

Battery mount ×1
電池盒




Chassis rail ×2
大桿



Hex. wheel hubs ×4
六角輪座


※ Used for STEP 3
保留零件到第3步驟

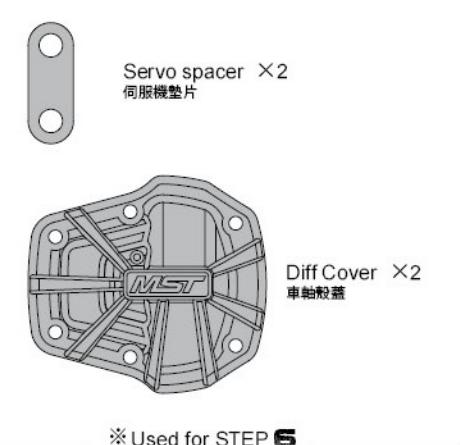

Servo spacer ×2
伺服機墊片


Diff Cover ×2
車輪殼蓋


※ Used for STEP 6
保留零件到第6步驟

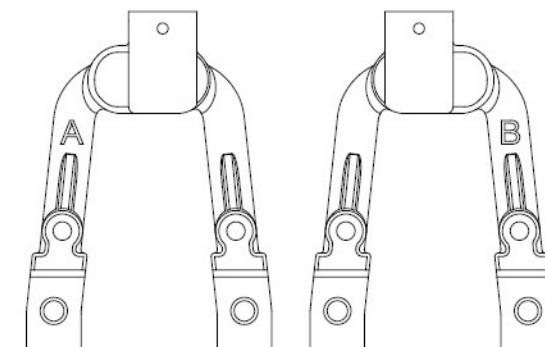

Damper stay A ×2
避震架

Damper stay B ×2
避震架

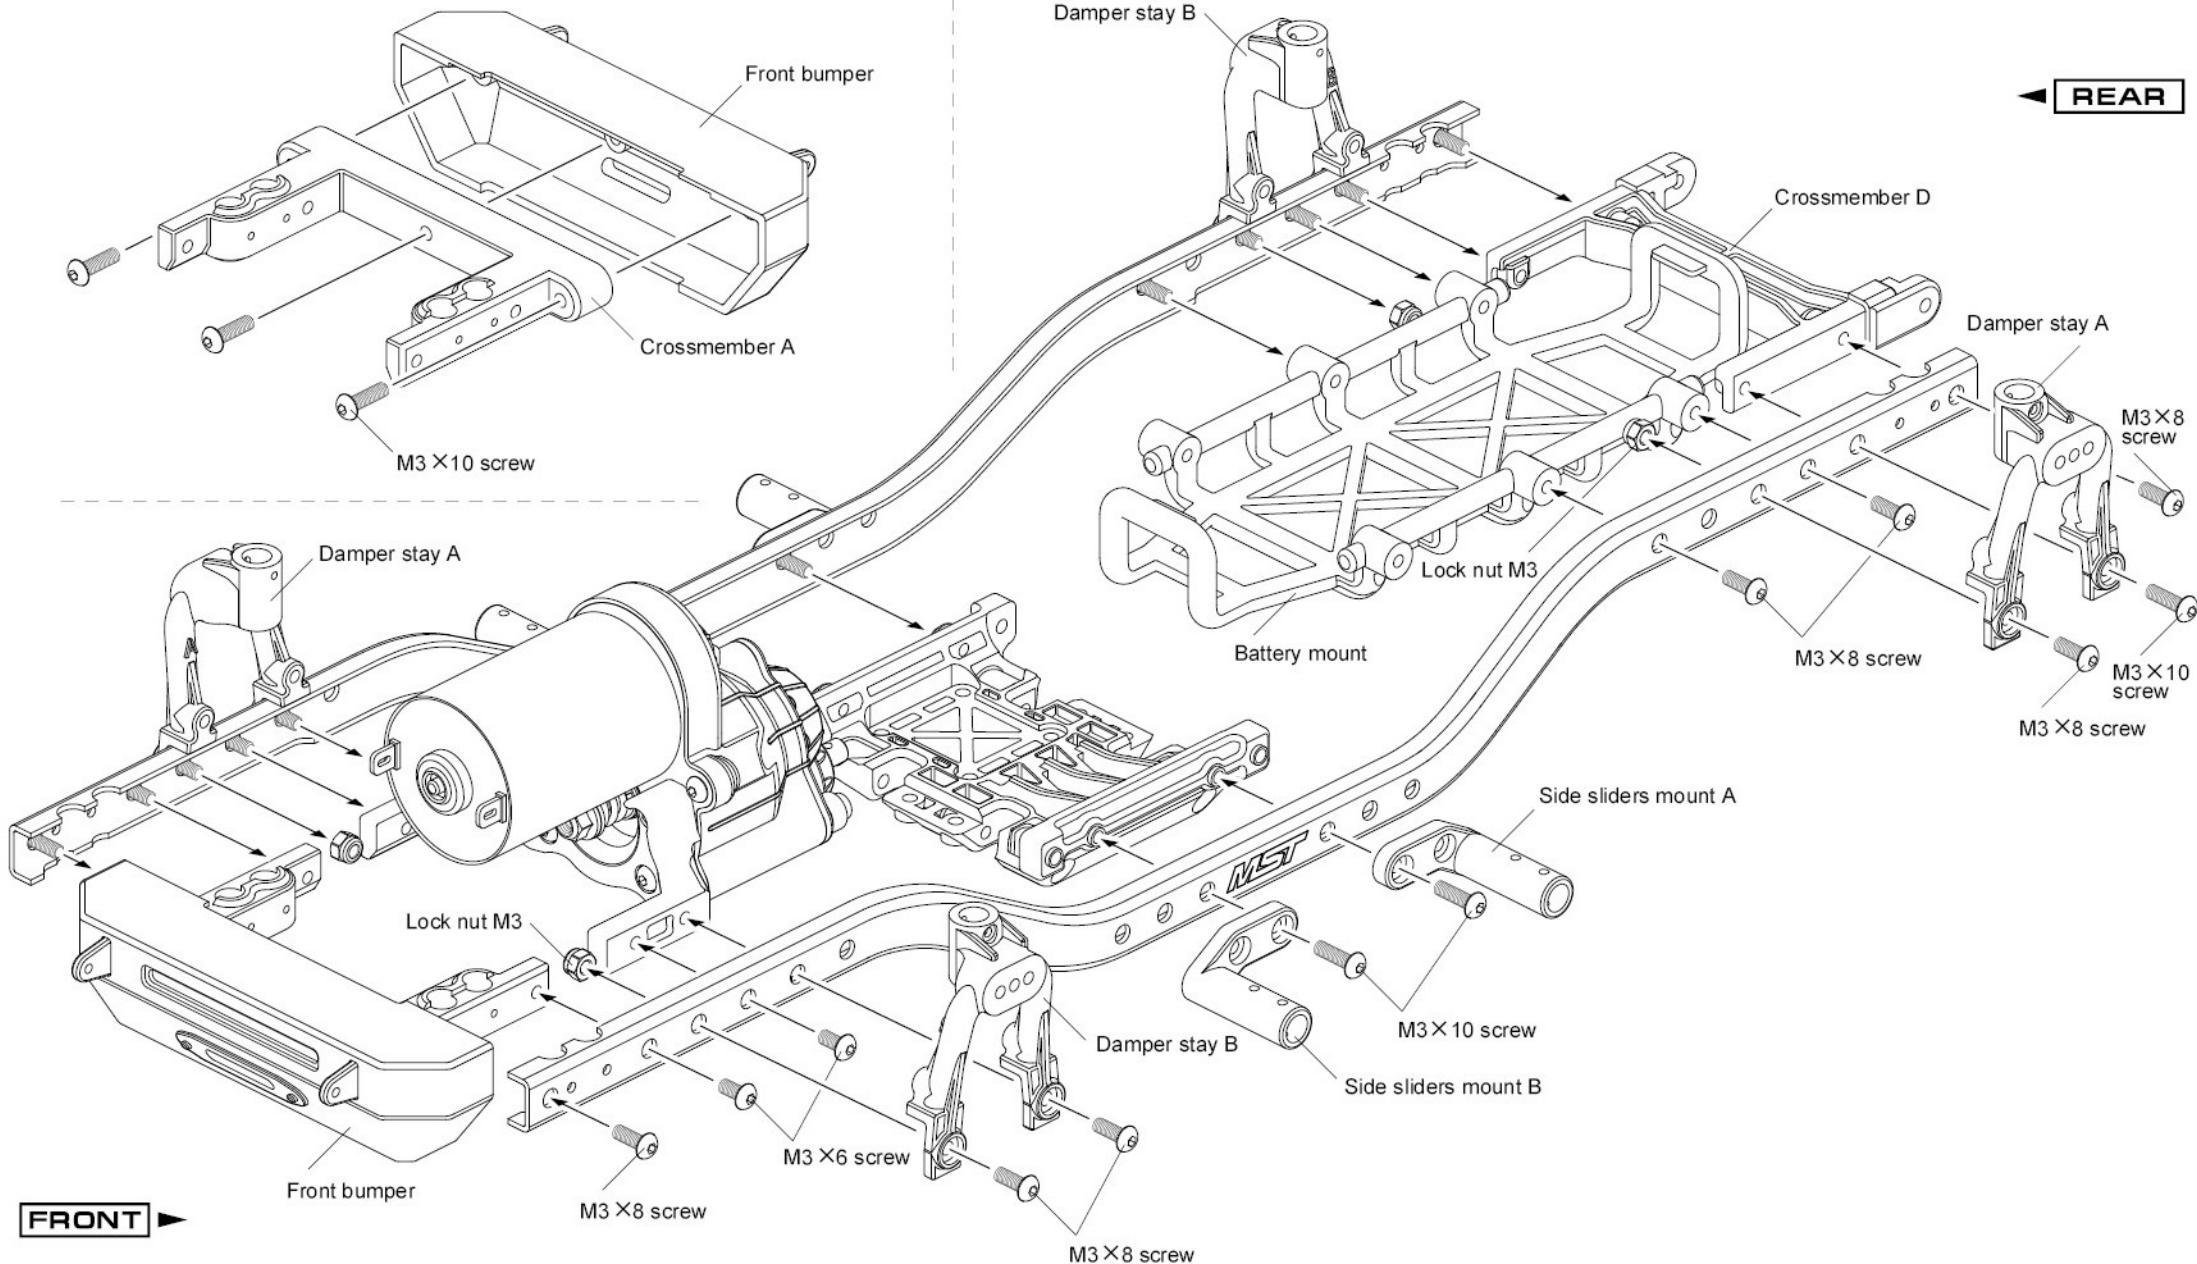




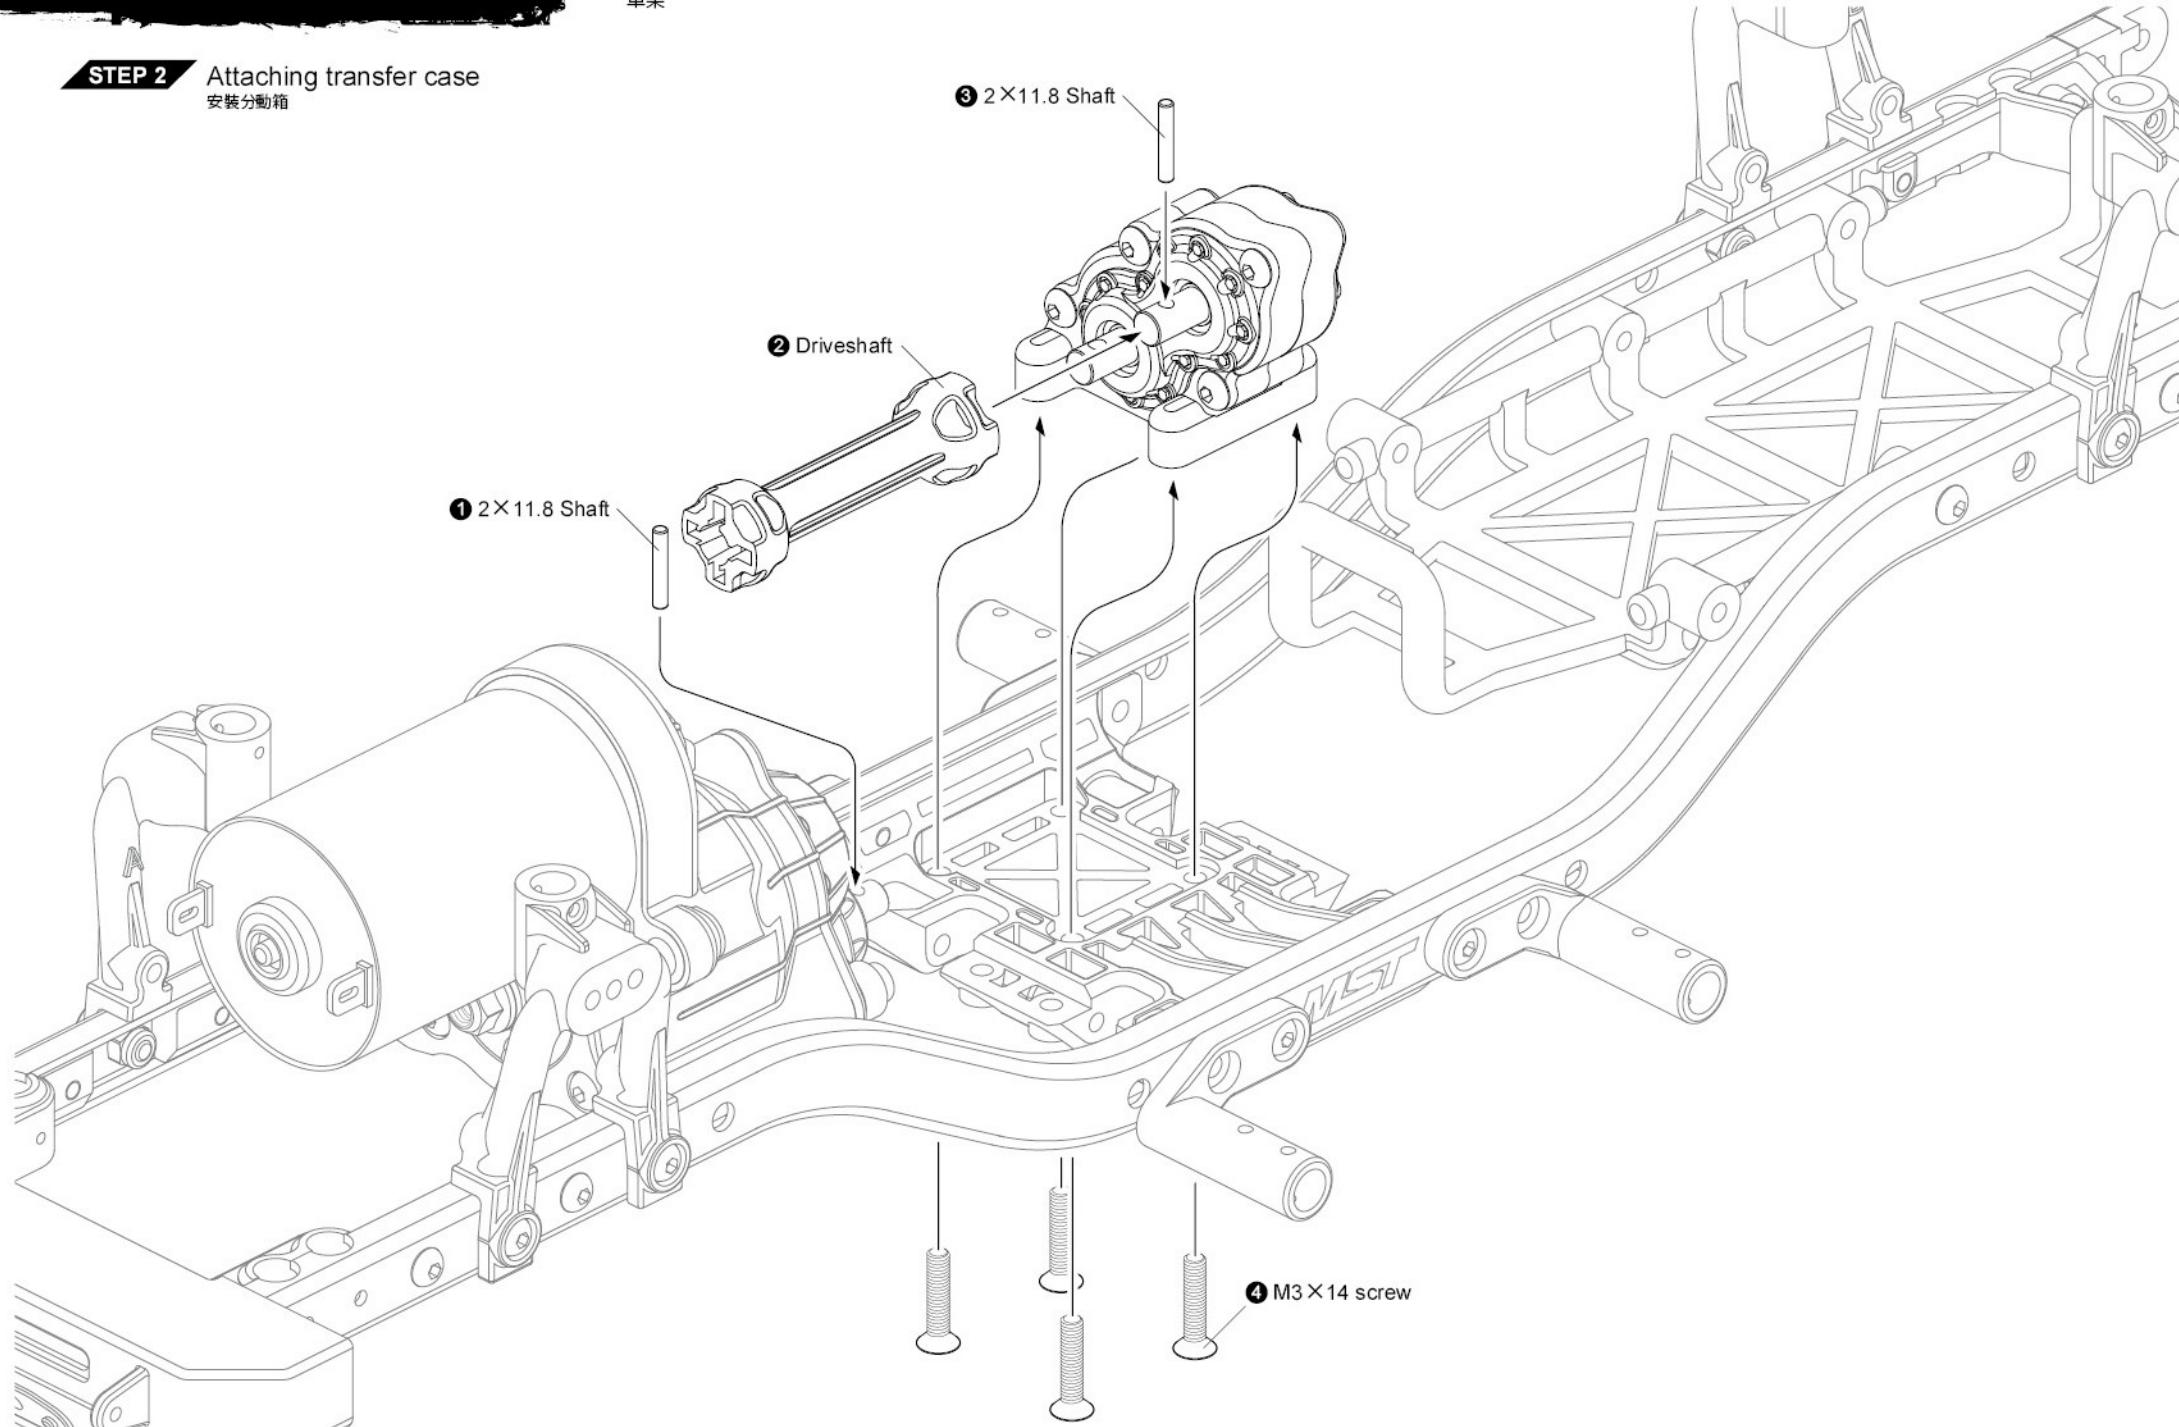
STEP 2 Attaching transfer case
安裝分動箱

PARTS BAG 5

4


LINKS

拉桿組

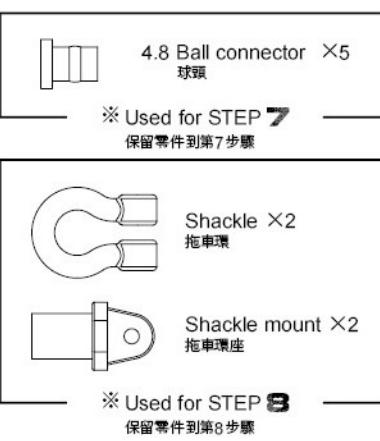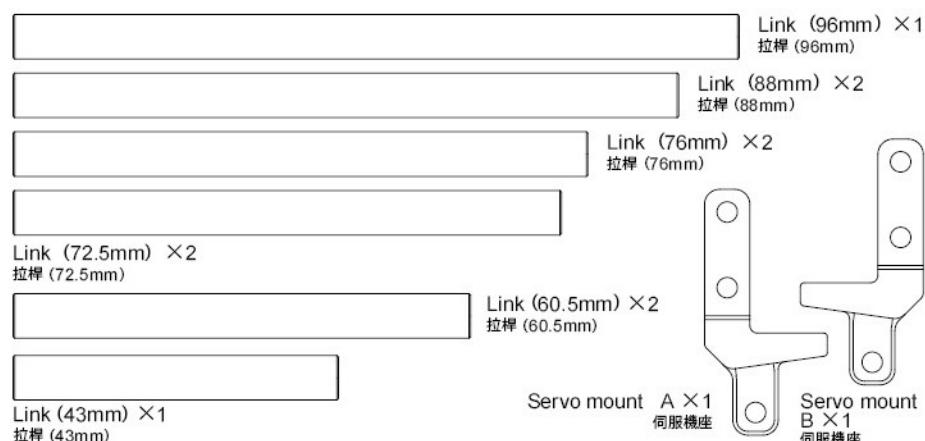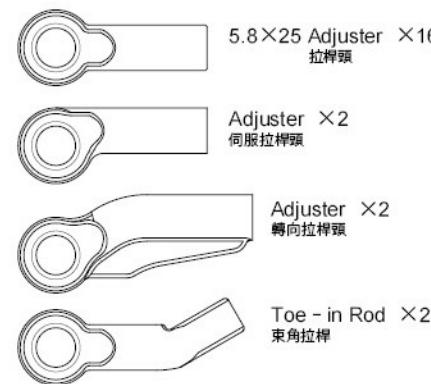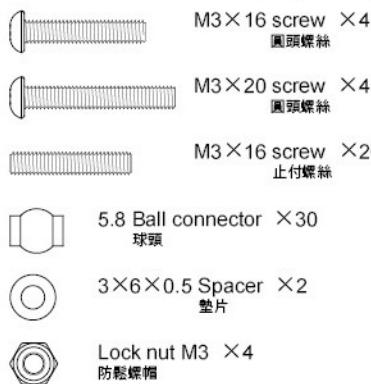


STEP 1

Toe-in Rod assembly 束角拉桿組裝

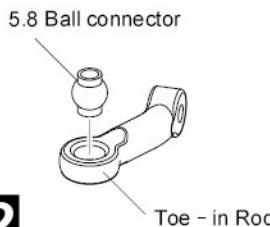


STEP 2

Upper & Lower link assembly 上&下拉桿組裝

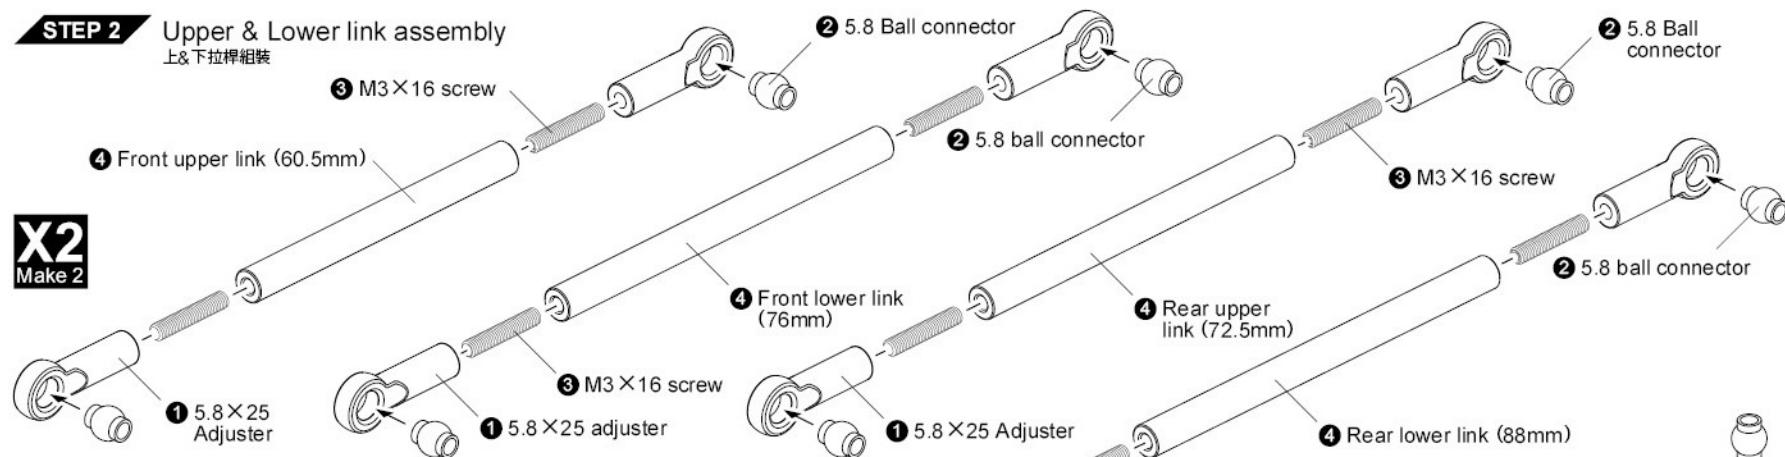


X2
Make 2

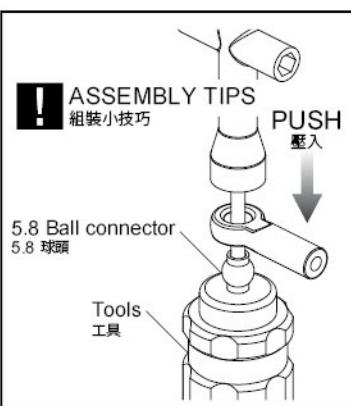

STEP 3


Servo link assembly 伺服拉桿組裝


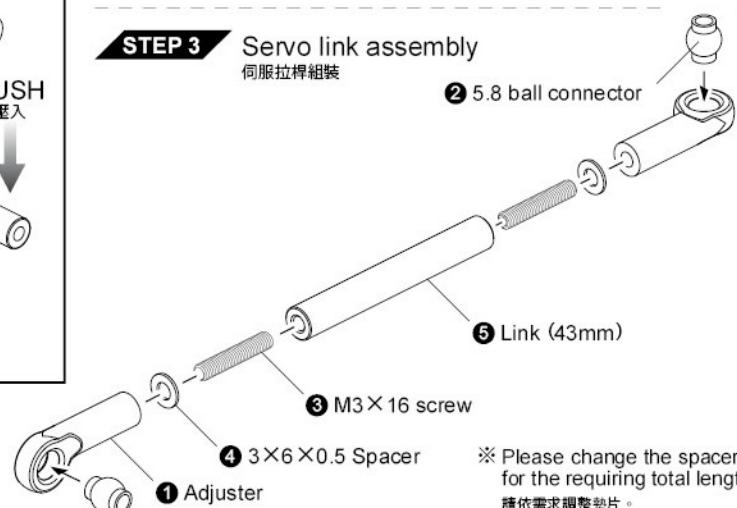










※ Please change the spacer thickness for the requiring total length.
請依需求調整墊片。


STEP 4

Steering link assembly 轉向拉桿組裝

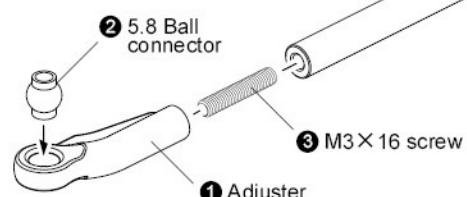


   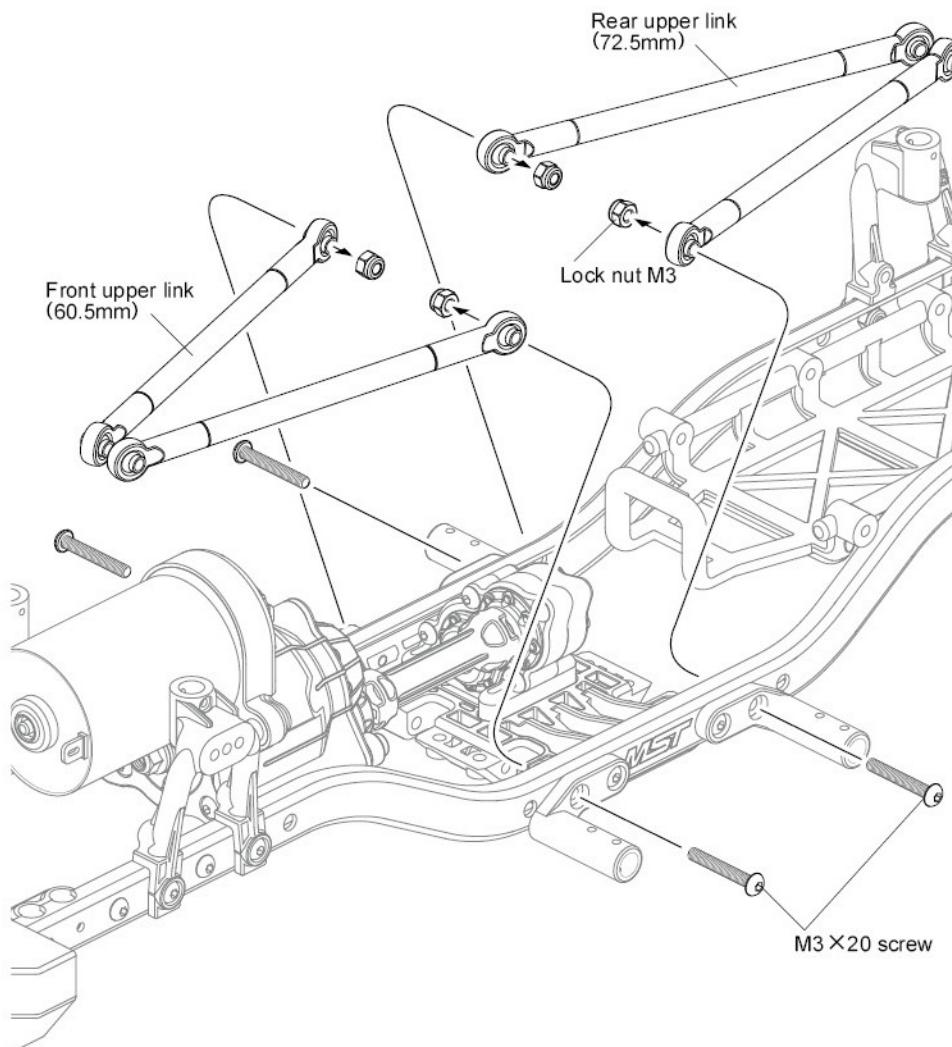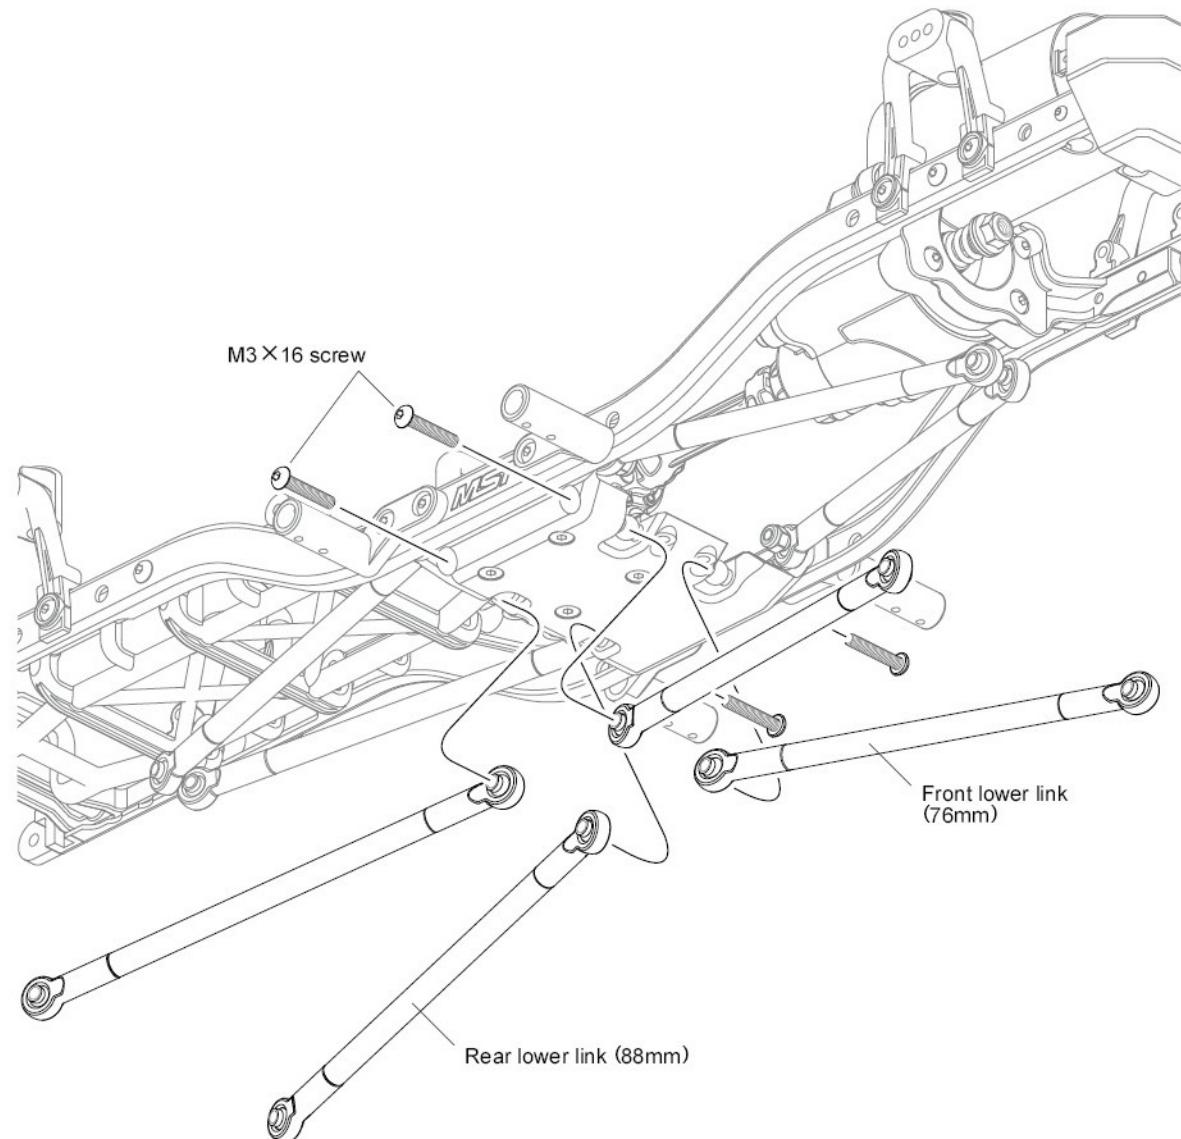STEP 5 Attaching upper link
安裝上拉桿**STEP 6** Attaching lower link
安裝下拉桿

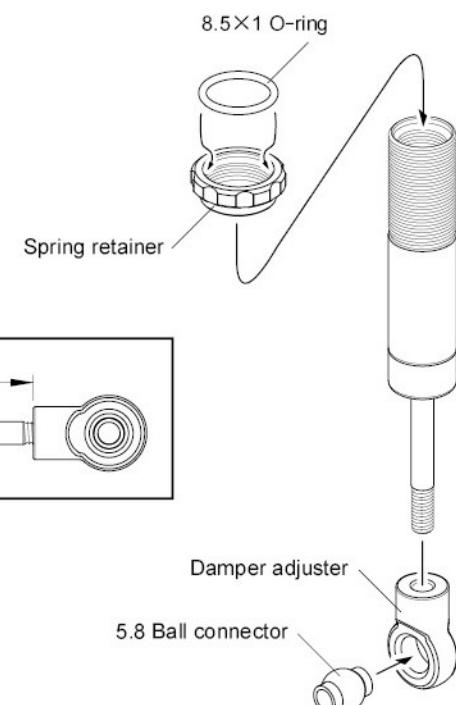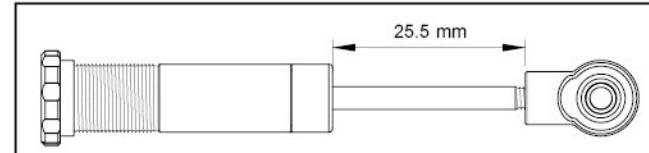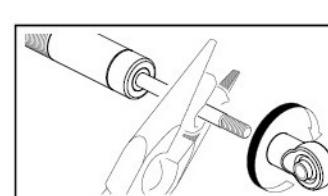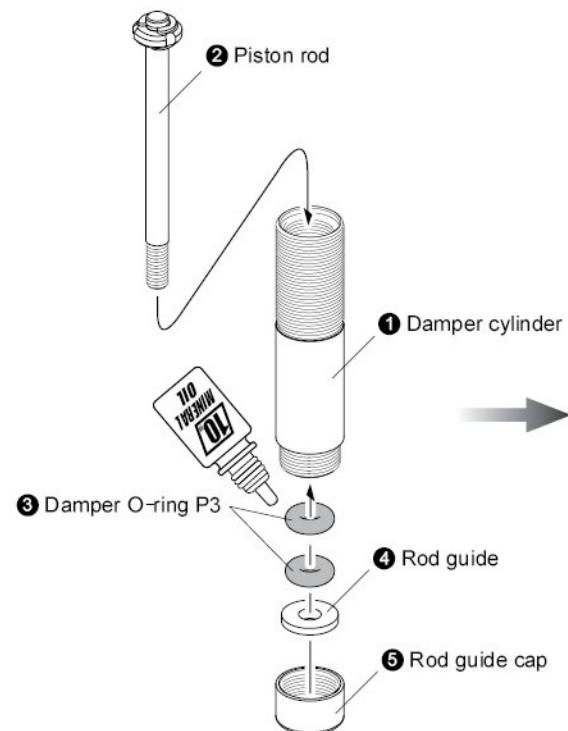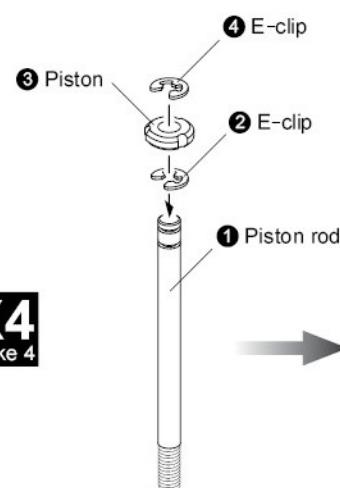
Cylinder cap ×4
避震器上蓋Spring retainer ×4
避震器調整環Piston rod ×4
避震軸心Coil spring 30mm (hard) (silver) ×2
避震彈簧 30mm (硬) (銀)Rod guide cap ×4
避震器下蓋Center spring retainer ×4
彈簧保持器Damper O-ring P3 ×8
避震器O環Coil spring 30mm (medium) (gold) ×4
避震彈簧 30mm (中) (金)Damper retainer ×4
避震器彈簧座8.5×1 O-ring ×4
O環Rod guide ×4
避震器下蓋墊片Coil spring 30mm (soft) (red) ×2
避震彈簧 30mm (軟) (紅)Damper adjuster ×4
避震器拉桿6×1 O-ring ×4
O環E-clip ×8
E扣Damper cylinder ×4
避震筒身STEP 1 Damper assembly
避震器組裝X4
Make 4

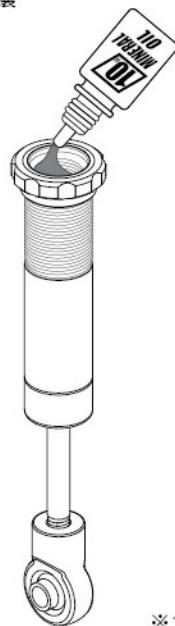STEP 1 Damper assembly
避震器組裝

※ The softer above.
軟彈簧安裝在上面。

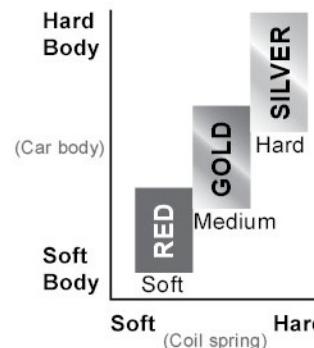

※ Front - gold + silver
前面裝配金色+銀色
Rear - red + gold
後面裝配紅色+金色

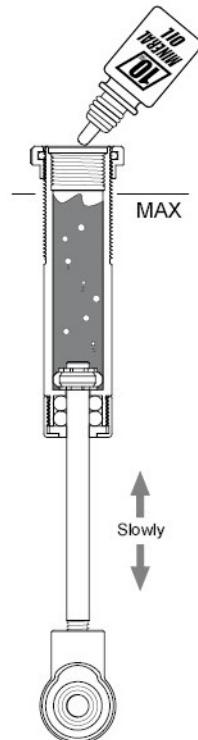


MAX



Slowly




Pull down piston and pour oil into cylinder.
Remove air bubbles by slowly moving piston up and down.
拉下活塞並填入避震油，緩慢上下移動活塞將氣泡移除。

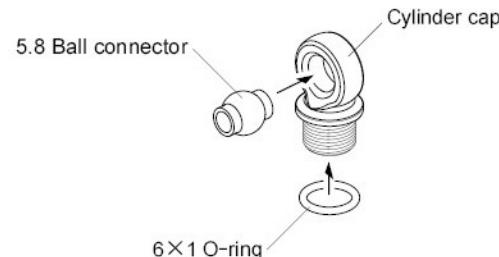

 
Pull down piston rod 1mm,
attach cylinder cap and absorb oil overflow with tissue paper.
將軸心下拉 1mm 後，蓋上避震器上蓋
並以面紙拭去溢出的避震油。

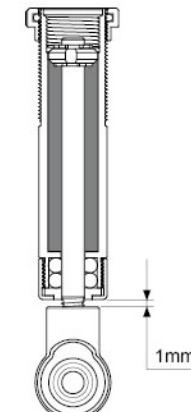


※ The softer above.
軟彈簧安裝在上面。

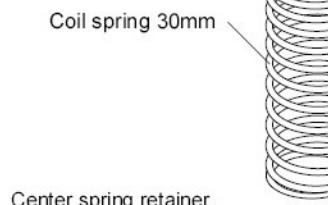

Center spring retainer

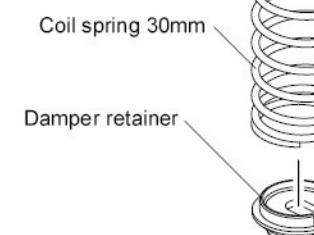


Damper retainer

 

※ Please adjust the spring retainer and spring according to the car height.
請依車高調整調整環和彈簧。

 OPTIONAL PARTS



TC70 Alum. shocks (black)(4)
TC70 鋁合金避震器組(黑)(4)
820116BK

SPECIFICATION

Length (Mounting hole to hole) : 70mm
Shock Body Diameter : 9mm
Spring Diameter : 12mm
Spring Length : 50mm
Full Shaft Travel Range : 20mm
Shaft Diameter : 3mm

◀ AXLE

車軸

	M2×8 cap screw ×12 有頭螺絲		2×11.8 Shaft ×4 插銷		3×6×2.5 Bearing ×16 軸承		23T Servo horn ×1 伺服機片
	M2.5×14 screw ×16 圓頭螺絲		3×11.8 Shaft ×8 插銷		4×8×3 Ball bearing ×8 培林		25T Servo horn ×1 伺服機片
	2.6×10 Screw ×1 自攻螺絲		3×6×0.5 Spacer ×4 墊片		5×9×3 Ball bearing ×8 培林		Knuckle cover ×4 轉向座蓋
	M3×8 screw ×4 圓頭螺絲		3×8×0.5 Spacer ×1 墊片		5×10×4 Ball bearing ×6 培林		Link mount ×4 下拉桿座
	M3×10 screw ×5 圓頭螺絲		5×7×0.3 Spacer ×2 墊片		8×12×3.5 Ball bearing ×6 培林		Gear B 14T ×8 齒輪 B 14T
	M3×14 screw ×14 圓頭螺絲		E-clip 2.0 ×2 E扣		Gear C 14T ×4 齒輪 B 14T		Gear 16T ×4 齒輪 16T
	M3×16 screw ×4 圓頭螺絲		E-clip 3.0 ×4 E扣		Bevel gear 15T ×2 小傎齒		Bevel gear 36T ×2 大傎齒
	M3×20 screw ×2 圓頭螺絲		E-clip 4.0 ×2 E扣		Knuckle ×4 轉向座		C HUB carrier ×4 轉向C座
	M3×25 screw ×3 圓頭螺絲		G-clip 12.0 ×4 G扣		MPA Axle housing ×2 MPA 軸殼		Cross joint ×4 連接軸
	King pin screw ×8 大王螺絲		Lock nut M2.5 ×16 防鬆螺帽		Wheel axle ×4 萬向接杆		Bevel gear shaft ×2 小傎齒軸
	MPA Axle ×4 MPA 軸		Cross joint ×4 連接軸		CVD axle ×4 輪軸		CVD axle ×4 輪軸